



Operator's Manual

Serial Number Range

GS-3384

from 43032

GS-3390

from 47263

GS-4390

from 47263

GS-5390

from 47263

ANSI/CSA
North America
South America
Asia
AUS
Australia

with
Maintenance
Information

Fourth Edition
Fourth Printing
Part No. 133564

Important

Read, understand and obey these safety rules and operating instructions before operating this machine. Only trained and authorized personnel shall be permitted to operate this machine. This manual should be considered a permanent part of your machine and should remain with the machine at all times. If you have any questions, contact us.

Contact Us:

Internet: www.genielift.com

E-mail: awp.techpub@terex.com

Contents

- Introduction 1
- Symbol and Hazard Pictorials Definitions..... 4
- General Safety 6
- Personal Safety..... 10
- Work Area Safety..... 11
- Legend 19
- Controls..... 20
- Inspections..... 25
- Operating Instructions..... 38
- Transport and Lifting Instructions 44
- Maintenance 47
- Specifications..... 51

Copyright © 2002 by Terex Corporation

Fourth Edition: Fourth Printing, November 2015

Genie is a registered trademark of Terex South Dakota, Inc. in the U.S.A. and many other countries. "GS" is a trademark of Terex South Dakota, Inc.

These machines comply with
ANSI/SIA 92.6
CAN B.354.4



Introduction

Owners, Users and Operators:

Thank you for choosing our machine for your application. Our number one priority is user safety, which is best achieved by our joint efforts. We feel that you make a major contribution to safety if you, as the equipment users and operators:

- 1 **Comply** with employer, job site and governmental rules.
- 2 **Read, understand and follow** the instructions in this and other manuals supplied with this machine.
- 3 **Use good safe work practices** in a commonsense way.
- 4 **Only have trained/certified operators**, directed by informed and knowledgeable supervision, running the machine.



Danger

Failure to obey the instructions and safety rules in this manual will result in death or serious injury.

Do Not Operate Unless:

- You learn and practice the principles of safe machine operation contained in this operator's manual.
 - 1 **Avoid hazardous situations.**
Know and understand the safety rules before going on to the next section.
 - 2 Always perform a pre-operation inspection.
 - 3 Always perform function tests prior to use.
 - 4 Inspect the workplace.
 - 5 Only use the machine as it was intended.
- You read, understand and obey the manufacturer's instructions and safety rules—safety and operator's manuals and machine decals.
- You read, understand and obey employer's safety rules and worksite regulations.
- You read, understand and obey all applicable governmental regulations.
- You are properly trained to safely operate the machine.

Introduction

Hazard Classification

Decals on this machine use symbols, color coding and signal words to identify the following:



Safety alert symbol—used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates a property damage message.

Intended Use

This machine is intended to be used only to lift personnel, along with their tools and materials to an aerial work site.

Introduction









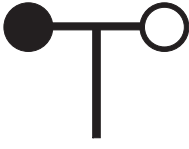








Safety Sign Maintenance

Replace any missing or damaged safety signs. Keep operator safety in mind at all times. Use mild soap and water to clean safety signs. Do not use solvent-based cleaners because they may damage the safety sign material.

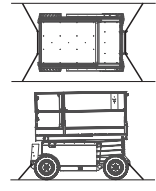Symbol and Hazard Pictorials Definitions

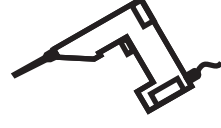				
Read the operator's manual	Read the service manual	Crush hazard	Crush hazard	Collision hazard
				
Tip-over hazard	Tip-over hazard	Tip-over hazard	Tip-over hazard	Electrocution hazard
				
Electrocution hazard	Explosion hazard	Fire hazard	Burn hazard	Skin injection hazard
				
Engage safety arm	Keep away from moving parts	Keep clear of outriggers and tires	Move machine to level ground	Close chassis tray
				
Lower the platform	Do not set up where it cannot be leveled with outriggers	Maintain required clearance	Only trained maintenance personnel should access compartments	Use a piece of cardboard or paper to search for leaks

Symbol and Hazard Pictorials Definitions

				
Chock the wheels	Release brakes	Tiedown	Lanyard attachment point	No smoking
				
Wheel load	Transport diagram	Side force	Wind speed	Outrigger load
				
Voltage rating for power to platform	Pressure rating for air line to platform	Maximum capacity	Crushing hazard	Hold rail while lowering
				
Collision hazard	Chock the wheels			

General Safety

52494

CAUTION




Crushing Hazard
Falling guard rails could cause injury.




Maintain firm grasp on platform rails when putting snap pins. Do not allow platform guard rails to tilt.

44736


DANGER





Tip-over Hazard
If tilt-alarm sounds, unit is on a severe slope. Death or serious injury could occur.



1 Lower the platform.




2 Move the machine to level surface.

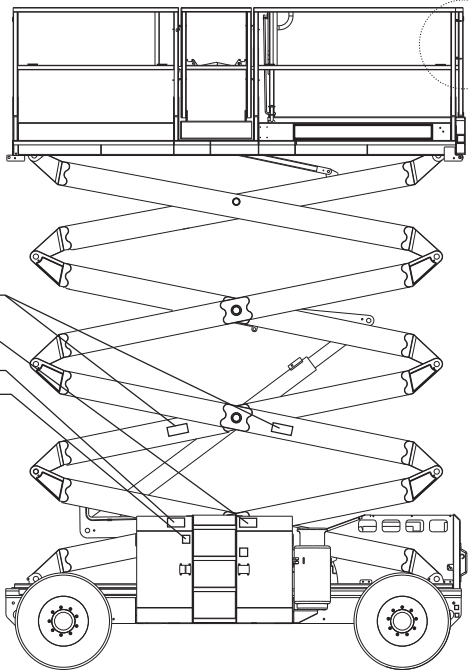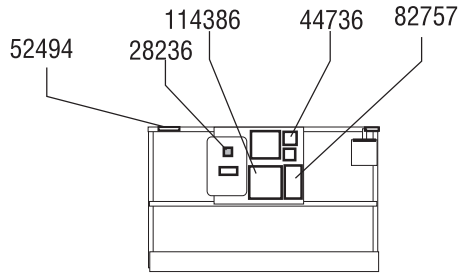


44255

DANGER




Crushing Hazard
Contact with moving parts will result in death or serious injury.




Keep away from moving parts.

82561


DANGER



Crushing Hazard
Death or serious injury can result from contact with moving scissor arms.



Engage safety arm before performing maintenance or repair.



See service manual.

82757

DANGER

Failure to read, understand and obey the safety rules and operating instructions in the operator's manual will result in death or serious injury.


Tip-over Hazards
Do not raise outriggers unless all four outriggers are properly lowered, footpads are in firm contact with ground and machine is level. Do not adjust outriggers while platform is raised. Do not set machine up where it cannot be leveled using only the outriggers. Do not drive while outriggers are lowered.

Operating Instructions
Position machine below desired work area. Make sure the engine is running. Push and hold auto level button. Activate up/down rocker switch in down direction to extend outriggers and level machine. A beep will sound when machine is level. When indicator light in function enable button is red, lift and drive functions are disabled.

Light turns green when outriggers are in firm contact with ground. Drive function is disabled while outriggers are down. To control individual outriggers Push and hold one or more individual outrigger buttons. Activate up/down rocker switch in desired direction to level machine. When setting machine up on a slope without using auto level function, the steer-end outriggers must be lowered first.

114385

DANGER



Electrocution Hazard
Death or injury can result from contacting electric power lines. Always contact the electric power line owner. The electric power shall be disconnected or the power lines moved or insulated before machine operations begin.

Line voltage	10 ft	Required clearance
0 to 50kV	10 ft	3.05m
50kV to 200kV	15 ft	4.60m
200kV to 350kV	20 ft	6.10m
350kV to 500kV	25 ft	7.62m
500kV to 750kV	35 ft	10.67m
750kV to 1000kV	45 ft	13.72m

114386

DANGER

Failure to read, understand and obey the operator's manual and the following safety rules will result in death or serious injury.

Improper Use Hazard
The operator is responsible for safe machine operation. This includes:
1 Avoid hazardous situations.
2 Always perform pre-operation inspection.
3 Always perform function/inspiration.
4 Inspect workplace.
5 Only use the machine at rated lift capacity. Do not operate with a load that exceeds the maximum slope or side slope rating for the machine. Modes without outriggers: Do not raise platform unless machine is on a level surface. Do not raise platform when wind speeds may exceed 28 mph / 12.5 m/s. Do not operate machine in strong or gusty winds. Do not increase speed in area of platform or load. Increasing area exposed to wind will decrease machine stability. Do not drive the machine on or near uneven terrain, unstable surfaces or other hazardous conditions with the platform raised. Do not push off or pull toward any object outside of the platform. Do not place or attach overhanging loads to any part of the machine. Use extreme care and slow speeds while driving the machine in stacked position across uneven terrain, debris, unstable or slippery surfaces and near holes and drop-offs. Do not alter or disable machine components that in any way affect safety and stability. Do not place ladders or scaffolds in platform or against any part of this machine.

Tip-over Hazards
Do not exceed rated load capacity. Do not raise platform unless machine is on a firm surface. Avoid drop-offs, holes and unstable or slippery surfaces. Do not drive machine on a slope that exceeds the maximum slope or side slope rating for the machine. Modes without outriggers: Do not raise platform unless machine is on a level surface. Do not raise platform when wind speeds may exceed 28 mph / 12.5 m/s. Do not operate machine in strong or gusty winds. Do not increase speed in area of platform or load. Increasing area exposed to wind will decrease machine stability. Do not drive the machine on or near uneven terrain, unstable surfaces or other hazardous conditions with the platform raised. Do not push off or pull toward any object outside of the platform. Do not place or attach overhanging loads to any part of the machine. Use extreme care and slow speeds while driving the machine in stacked position across uneven terrain, debris, unstable or slippery surfaces and near holes and drop-offs. Do not alter or disable machine components that in any way affect safety and stability. Do not place ladders or scaffolds in platform or against any part of this machine.

Electrocution Hazards
This machine is not electrically insulated and will not provide protection from contact with or proximity to electrical current.

Maintain required clearance.

Line voltage	Required clearance
0 to 50kV	10 ft 3.05m
50kV to 200kV	15 ft 4.60m
200kV to 350kV	20 ft 6.10m
350kV to 500kV	25 ft 7.62m
500kV to 750kV	35 ft 10.67m
750kV to 1000kV	45 ft 13.72m

Explosion Hazards
Do not start engine if you smell a detect liquid petroleum gas (LPG), gasoline, diesel fuel or other explosive substances. Do not refuel the machine with the engine running.

Do not use machine on a moving or mobile surface or vehicle.
Be sure all tires are in good condition, castle nuts are properly tightened and collar pins are properly installed.

Fall Hazards
Do not sit, stand or climb on the platform rails. Maintain a firm footing on the platform floor at all times. Do not climb down from the platform when raised. Attach platform entry chain and close entry gate before operating.


Crushing Hazards
Keep hands and limbs out of scissers. Use common sense and planning when operating the machine with controller from ground. Maintain safe distances between operator, machine and fixed objects.

Collision Hazards
Be aware of limited sight distance and blind spots when driving or operating. Check work area for overhead obstructions or other possible hazards. Be aware of crushing hazard when grasping any object outside of the platform. Observe and use color-coded direction arrows on the platform controls for drive and steer functions.


Damaged Machine Hazards
Do not use a damaged or malfunctioning machine. Be sure all maintenance has been performed as specified in the appropriate operator's and service manuals. Be sure all decals are in place and legible. Be sure safety, operator's and responsibilities manuals are complete, legible and in the storage container located on the platform.

114258

DANGER




Burn Hazard
Fuel and fumes can explode and burn.



No smoking. No flame. Stop engine.

28236

WARNING




Read and understand Operator's Manual, Responsibilities Manual and Safety Manual and all safety signs before using or maintaining machine.
If you do not understand the information in the manuals, consult your supervisor, the owner or the manufacturer.

Improper operation or maintenance can result in serious injury or death.


General Safety

97602

⚠ WARNING



Explosion Hazard
Death or serious injury can result from the use of ether or other high energy starting aids.



Do not use ether or other high energy starting aids on machines equipped with glow plugs.

97602 B

72853

⚠ DANGER

Failure to read, understand and obey the safety rules will result in death or serious injury. This includes:

- 1. Avoid hazardous situations.
- 2. Always perform a pre-operation inspection.
- 3. Always perform function tests prior to use.
- 4. Inspect the work area.
- 5. Only use the machine as it was intended.


Do not operate unless:

- You read, understand and obey manufacturer's instructions and safety rules — safety and quality are essential and costly.
- you follow safety rules.
- you are properly trained to safely operate this machine.


You are responsible to safely operate this machine.

82558

⚠ WARNING



Injection Hazard
Escaping fluid under pressure can penetrate skin, causing serious injury.




Relieve pressure before disconnecting hydraulic lines. Keep away from leaks and pin holes. Use a piece of cardboard or paper to search for leaks. Do not use hand.

Fluid injected into skin must be surgically removed within a few hours by a doctor familiar with this type of injury or gangrene will result.


82558 B

31788

⚠ DANGER



Explosion / Burn Hazard
Ignition of explosive gases or contact with corrosive acid will cause death, burns or blindness.



Keep all open flames and sparks away. Wear personal protective equipment, including face shield, gloves and long sleeve shirt.

READ MANUALS
Read all manuals prior to operation.

 
DO NOT OPERATE equipment if you do not understand the information in the manuals.

Consult your supervisor, the owner or the manufacturer.


31788 C

31060

⚠ DANGER



Tip-over Hazard
Altering or disabling limit switches can result in machine tip-over. Machine tip-over will result in death or serious injury.




Do not alter or disable limit switch(es).

31060 C

 
114385

⚠ DANGER



Electrocution Hazard
Death or injury can result from contacting electric power lines.


Always contact the electric power line owner. The electric power shall be disconnected or the power lines moved or insulated before machine operations begin.




Maintain required clearance.	
Line voltage	Required clearance
0 to 50KV	10ft 3.05m
50KV to 200KV	15ft 4.57m
200KV to 350KV	20ft 6.10m
350KV to 500KV	25ft 7.62m
500KV to 750KV	35ft 10.67m
750KV to 1000KV	40ft 12.19m

72186

⚠ WARNING



Crushing hazard.
Lowering the outriggers onto a person's foot may cause serious injury.




Stay clear. Be sure that nothing is under the outriggers before lowering.


72186 B

44255

⚠ DANGER



Crushing Hazard
Contact with moving parts will result in death or serious injury.

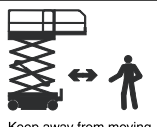

Keep away from moving parts.

44255 C

28175

⚠ WARNING




Compartment access is restricted.
Contact with components under any cover may result in serious injury.



Only trained maintenance personnel should access compartments. Access by operator is only advised when performing Pre-operation Inspection. All compartments must remain closed and secured during operation.

28175 H

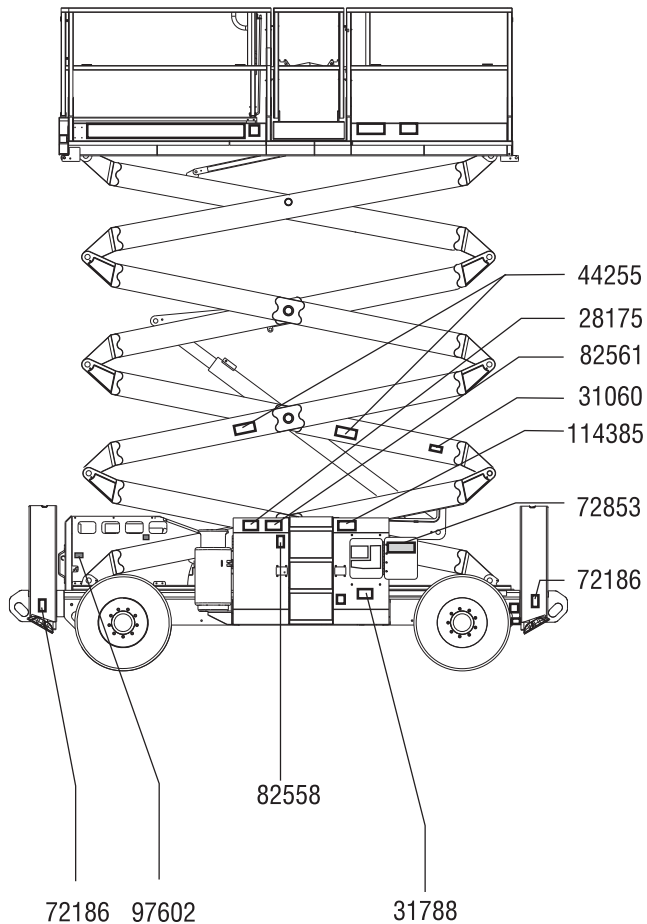


General Safety

82487




114371

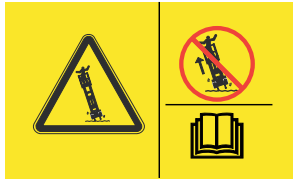

133537

114338



82487

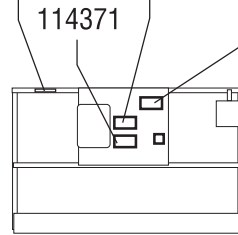

133537



114338

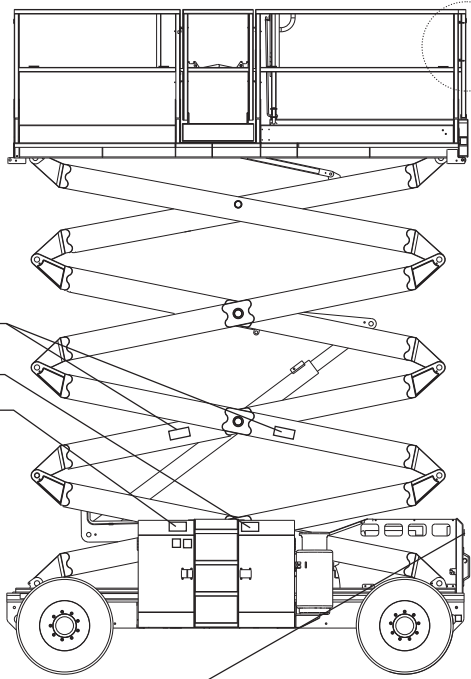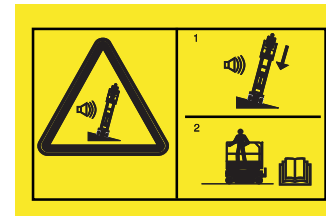


82562

82476

82474

82562

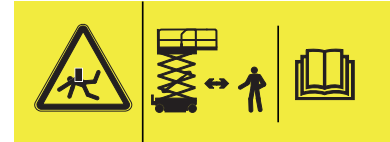

82474



82473

82560



82473



82476



General Safety

114337



82476



82481




82475



82560




82562

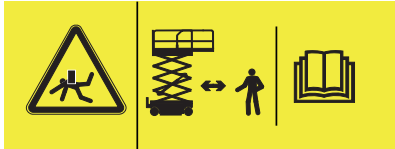

82474



82473

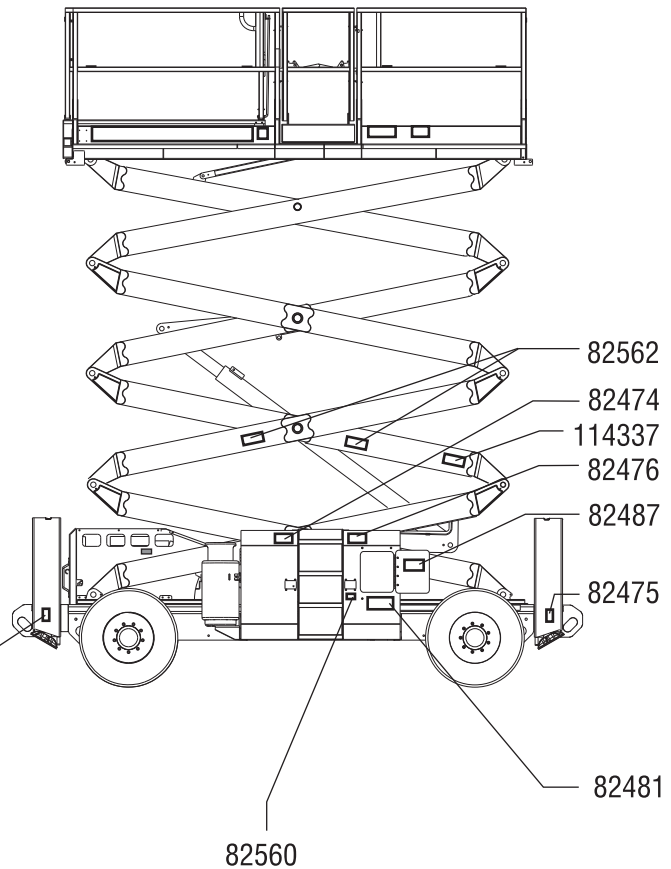

82475

82560

82481

Personal Safety

Personal Fall Protection

Personal fall protection equipment (PFPE) is not required when operating this machine. If PFPE is required by job site or employer rules, the following shall apply:

All PFPE must comply with applicable governmental regulations and must be inspected and used in accordance with the manufacturer's instructions.

Work Area Safety

⚠ Electrocuting Hazards

This machine is not electrically insulated and will not provide protection from contact with or proximity to electrical current.



Obey all local and governmental regulations regarding required clearance from electrical power lines. At a minimum, the required clearance contained in the chart below must be followed.

Line Voltage	Required Clearance	
0 to 50KV	10 ft	3.05 m
50 to 200KV	15 ft	4.60 m
200 to 350KV	20 ft	6.10 m
350 to 500KV	25 ft	7.62 m
500 to 750KV	35 ft	10.67 m
750 to 1000KV	45 ft	13.72 m

Allow for platform movement, electrical line sway or sag, and beware of strong or gusty winds.



Keep away from the machine if it contacts energized power lines. Personnel on the ground or in the platform must not touch or operate the machine until energized power lines are shut off.

Do not operate the machine during lightning or storms.

Do not use the machine as a ground for welding.

⚠ Tip-over Hazards

Occupants, equipment and materials shall not exceed the maximum platform capacity or the maximum platform capacity of the platform extension.

Maximum capacity – GS-3384 and GS-3390

Maximum occupants 7

Models with one platform extension

Platform retracted	2500 lbs	1134 kg
Platform only	2000 lbs	907 kg
Extension only	500 lbs	227 kg



Extension only 500 lbs / 227 kg	Platform only 2000 lbs / 907 kg
------------------------------------	------------------------------------

Models with two platform extensions

Platform retracted	2500 lbs	1134 kg
Platform with one extension out	2000 lbs	907 kg
Platform with two extensions out	1500 lbs	680 kg
Each extension only	500 lbs	227 kg



Extension only 500 lbs / 227 kg	Platform only 1500 lbs / 680 kg	Extension only 500 lbs / 227 kg
------------------------------------	---------------------------------------	------------------------------------

Work Area Safety

Maximum capacity - GS-4390		
Maximum occupants		7
Models with one platform extension		
Platform retracted	1500 lbs	680 kg
Platform only	1000 lbs	454 kg
Extension only	500 lbs	227 kg



Extension only	Platform only
500 lbs / 227 kg	1000 lbs / 454 kg

Models with two platform extensions		
Platform retracted	1500 lbs	680 kg
Platform with one extension out	1000 lbs	454 kg
Platform with two extensions out	500 lbs	227 kg
Extension only	500 lbs	227 kg



Extension only	Platform only	Extension only
500 lbs / 227 kg	500 lbs / 227 kg	500 lbs / 227 kg

Maximum capacity – GS-5390		
Maximum occupants - ANSI & CSA		6
Maximum occupants - Australia		4
Models with one platform extension		
Platform retracted	1500 lbs	680 kg
Platform only	1000 lbs	454 kg
Extension only	500 lbs	227 kg



Extension only	Platform only
500 lbs / 227 kg	1000 lbs / 454 kg

Models with two platform extensions		
Platform retracted	1500 lbs	680 kg
Platform with one extension out	1000 lbs	454 kg
Platform with two extensions out	500 lbs	227 kg
Each extension only	500 lbs	227 kg



Extension only	Platform only	Extension only
500 lbs / 227 kg	500 lbs / 227 kg	500 lbs / 227 kg

Work Area Safety



Do not raise the platform unless the machine is on a firm, level surface.



Do not push off or pull toward any object outside of the platform.



Do not depend on the tilt alarm as a level indicator. The tilt alarm sounds on the chassis only when the machine is on a severe slope.

If the tilt alarm sounds:

Lower the platform. Move the machine to a firm, level surface. If the tilt alarm sounds when the platform is raised, use extreme caution to lower the platform.

Do not alter or disable the limit switches.

Do not drive over 0.7 mph / 1.1 km/h with the platform raised.

Do not use the platform controls to free a platform that is caught, snagged or otherwise prevented from normal motion by an adjacent structure. All personnel must be removed from the platform before attempting to free the platform using the ground controls.

Maximum allowable side force - ANSI and CSA

GS-3384	350 lbs / 1557 N
GS-3390	350 lbs / 1557 N
GS-4390	350 lbs / 1557 N
GS-5390	300 lbs / 1335 N

Maximum manual force – **Australia**

90 lbs / 400 N

Do not use the machine as a crane.

Do not push the machine or other objects with the platform.

Do not contact adjacent structures with the platform.

Do not tie the platform to adjacent structures.

Do not place loads outside the platform perimeter.

Do not raise the platform when wind speeds may exceed 28 mph / 12.5 m/s. If wind speeds exceed 28 mph / 12.5 m/s when the platform is raised, lower the platform and do not continue to operate the machine.

Work Area Safety



Do not operate the machine in strong or gusty winds. Do not increase the surface area of the platform or the load. Increasing the area exposed to the wind will decrease machine stability.



Do not place or attach fixed or overhanging loads to any part of this machine.



Do not drive the machine on or near uneven terrain, unstable surfaces or other hazardous conditions with the platform raised.



Do not place ladders or scaffolds in the platform or against any part of this machine.

Use extreme care and slow speeds while driving the machine in the stowed position across uneven terrain, debris, unstable or slippery surfaces and near holes and drop-offs.

Do not alter or disable machine components that in any way affect safety and stability.

Do not replace items critical to machine stability with items of different weight or specification.

Do not modify or alter an aerial work platform without prior written permission from the manufacturer. Mounting attachments for holding tools or other materials onto the platform, toeboards or guard rail system can increase the weight in the platform and the surface area of the platform or the load.

Do not transport tools and materials unless they are evenly distributed and can be safely handled by person(s) in the platform.

Do not use the machine on a moving or mobile surface or vehicle.

Be sure all tires are in good condition, air-filled tires are properly inflated and lug nuts are properly tightened.

Work Area Safety

⚠ Operation on Slopes Hazards

Do not drive the machine on a slope that exceeds the slope and side slope rating of the machine. Slope rating applies to machines in the stowed position.

Model	Maximum slope rating, stowed position	Maximum side slope rating, stowed position
GS-3384 GS-3390 GS-4390	50% (26°)	50% (26°)
GS-5390	40% (22°)	40% (22°)

Note: Slope rating is subject to ground conditions and adequate traction.

⚠ Fall Hazards

The guard rail system provides fall protection. If occupant(s) of the platform are required to wear personal fall protection equipment (PFPE) due to job site or employer rules, PFPE and its use shall be in accordance with the PFPE manufacturer's instructions and applicable governmental requirements. Use approved lanyard attachment point provided.



Do not sit, stand or climb on the platform guard rails. Maintain a firm footing on the platform floor at all times.



Do not climb down from the platform when raised.

Keep the platform floor clear of debris.


Do not enter or exit the platform unless the machine is in the stowed position.

Attach the platform entry chain or close the entry gate before operating.

Do not operate the machine unless the guard rails are properly installed and the entry is secured for operation.

Work Area Safety

⚠ Collision Hazards

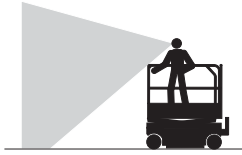

Be aware of limited sight distance and blind spots when driving or operating.

Be aware of extended platform position when moving the machine.

The machine must be on a level surface or secured before releasing the brakes.

Operators must comply with employer, job site and governmental rules regarding use of personal protective equipment.



Check the work area for overhead obstructions or other possible hazards.



Be aware of crushing hazards when grasping the platform guard rail.

Observe and use color-coded direction arrows on the platform controls and the platform decal plate for drive and steer functions.



Do not lower the platform unless the area below is clear of personnel and obstructions.



Limit travel speed according to the condition of the ground surface, congestion, slope, location of personnel, and any other factors which may cause collision.

Do not operate a machine in the path of any crane or moving overhead machinery unless the controls of the crane have been locked out and/or precautions have been taken to prevent any potential collision.

No stunt driving or horseplay while operating a machine.

Work Area Safety

⚠ Bodily Injury Hazard

Always operate the machine in a well-ventilated area to avoid carbon monoxide poisoning.

Do not operate the machine with a hydraulic oil or air leak. An air leak or hydraulic leak can penetrate and/or burn skin.

Improper contact with components under any cover will cause serious injury. Only trained maintenance personnel should access compartments. Access by the operator is only advised when performing a pre-operation inspection. All compartments must remain closed and secured during operation.

⚠ Component Damage Hazards

Do not use any battery or charger greater than 12V to jump-start the engine.

Do not use the machine as a ground for welding.

Do not operate the machine in locations where extremely high magnetic fields may be present.

⚠ Explosion and Fire Hazards

Do not start the engine if you smell or detect liquid petroleum gas (LPG), gasoline, diesel fuel or other explosive substances.

Do not refuel the machine with the engine running.

Refuel the machine and charge the battery only in an open, well-ventilated area away from sparks, flames and lighted tobacco.

Do not operate the machine or charge the battery in hazardous locations or locations where potentially flammable or explosive gases or particles may be present.

Do not spray ether into engines equipped with glow plugs.

⚠ Damaged Machine Hazards

Do not use a damaged or malfunctioning machine.

Conduct a thorough pre-operation inspection of the machine and test all functions before each work shift. Immediately tag and remove from service a damaged or malfunctioning machine.

Be sure all maintenance has been performed as specified in this manual and the appropriate Genie service manual.

Be sure all decals are in place and legible.

Be sure the operator's, safety and responsibilities manuals are complete, legible and in the storage container located on the machine.

Work Area Safety

▲ Crushing Hazard

Keep hands and limbs out of scissors.

Use common sense and planning when operating the machine with the controller from the ground. Maintain safe distances between the operator, the machine and fixed objects.

Maintain a firm grasp on the platform rail when pulling the rail pins. Do not allow the platform guard rails to fall.

▲ Outrigger Safety

Tip-over Hazards

Do not lower the outriggers unless the machine is on a firm surface. Avoid drop-offs, holes, unstable or slippery surfaces and other possible hazardous conditions.

When the auto level function is not being used and the outriggers are being lowered individually, the steer-end outriggers must be lowered first.

Do not raise the platform unless the machine is level. Do not set the machine up on a surface where it cannot be leveled using only the outriggers.

Do not raise the platform unless all four outriggers are properly lowered, the footpads are in firm contact with the ground and the machine is level.

Do not adjust the outriggers while the platform is raised.

Do not drive while the outriggers are lowered.

▲ Battery Safety

Burn Hazards



Batteries contain acid. Always wear protective clothing and eye wear when working with batteries.

Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda and water.

Do not expose the batteries or the charger to water or rain during charging.

Explosion Hazards




Keep sparks, flames and lighted tobacco away from batteries. Batteries emit explosive gas.

Do not contact the battery terminals or the cable clamps with tools that may cause sparks.

Component Damage Hazard



Do not use any battery charger greater than 24V to charge the batteries.

Legend

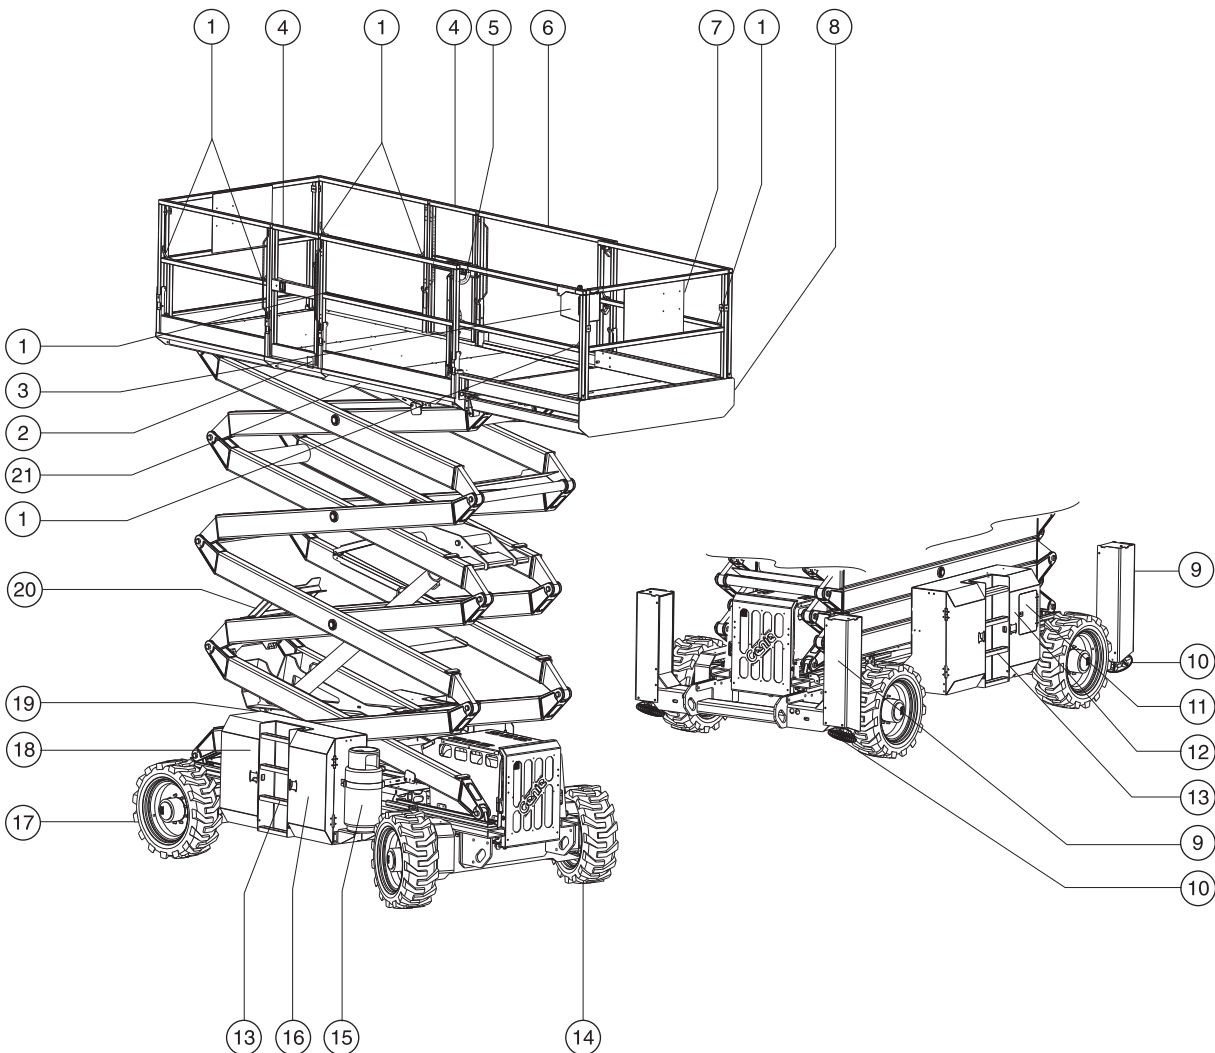

- | | | |
|-------------------------------------|---|--|
| 1 Lanyard anchorage points | 9 Outrigger housing
(if equipped with outriggers) | 15 LPG tank |
| 2 GFCI outlet | 10 Outrigger footpad
(if equipped with outriggers) | 16 Hydraulic tank (behind cover) |
| 3 Platform controls | 11 Ground controls with LCD
readout screen | 17 Non-steer tire |
| 4 Platform entry gate | 12 Tilt alarm
(behind ground control panel) | 18 Fuel tank (behind cover) |
| 5 Platform extension lock
handle | 13 Entry ladder | 19 Power to platform
(hidden from view) |
| 6 Platform guard rails | 14 Steer tire | 20 Safety arm (hidden from view) |
| 7 Manual storage container | | 21 Capacity indicator
(if equipped) |
| 8 Platform extension | | |

Controls

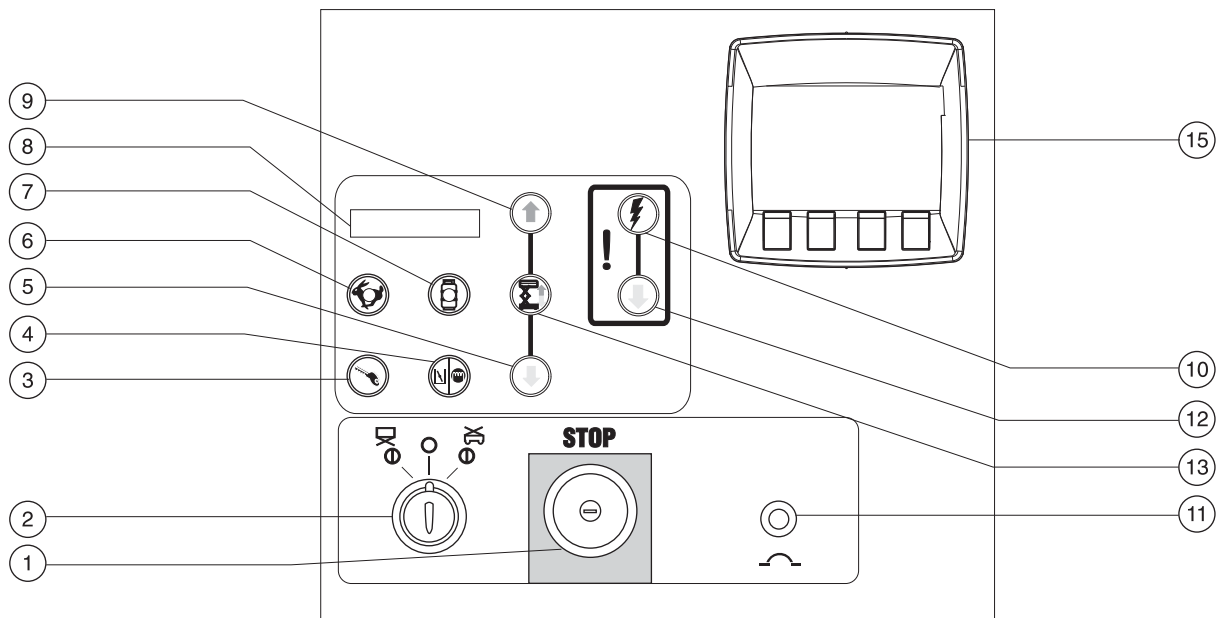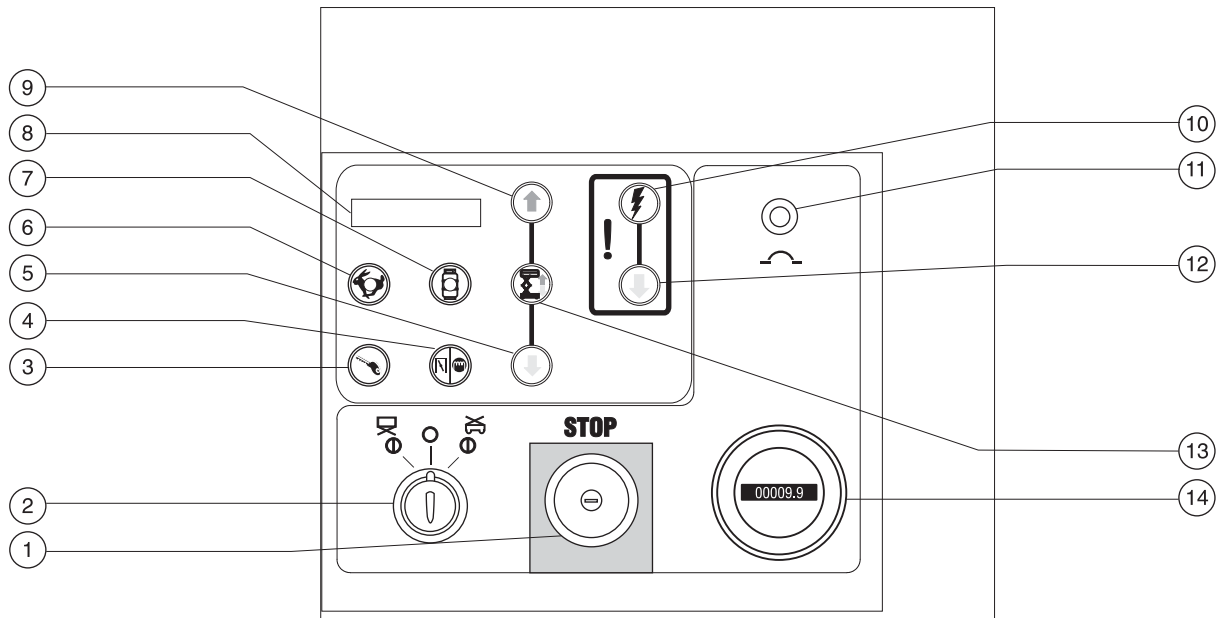

Ground Control Panel



Controls

Ground Control Panel

1 Red Emergency Stop button

Push in the red Emergency Stop button to the off position to stop all functions. Pull out the red Emergency Stop button to the on position to operate the machine.

2 Key switch for platform/off/ground selection

Turn the key switch to the platform position and the platform controls will operate. Turn the key switch to the off position and the machine will be off. Turn the key switch to the ground position and the ground controls will operate.

3 Engine start button

Press this button to start the engine.

4 Gasoline/LPG models: Choke button

Press this button to activate the choke.

Diesel models: Glow plug button

Press this button to activate the glow plugs.

5 Platform down button

Press this button and the platform will lower.

6 Engine idle select button with indicator light

Press this button to select the engine idle setting. Light on indicates high idle is selected. Light off indicates low idle is selected.

7 Gasoline/LPG models: LPG select button with indicator light

Press this button to select fuel. Light on indicates that LPG is selected. Light off indicates gasoline is selected.

8 LCD readout screen

9 Platform up button

Press this button and the platform will raise.

10 Emergency lowering function enable button

Press this button to activate the emergency lowering function.

11 20A circuit breaker for system circuit

12 Emergency lowering down button

Press this button to activate the emergency lowering down function.

13 Lift function enable button

Press this button to activate the lift function.


14 Hour meter

The hour meter displays the number of hours the machine has operated.

15 LCD readout screen

Screen displays hour meter, voltage, oil pressure and coolant temperature. Screen also displays fault codes and other service information.

Controls

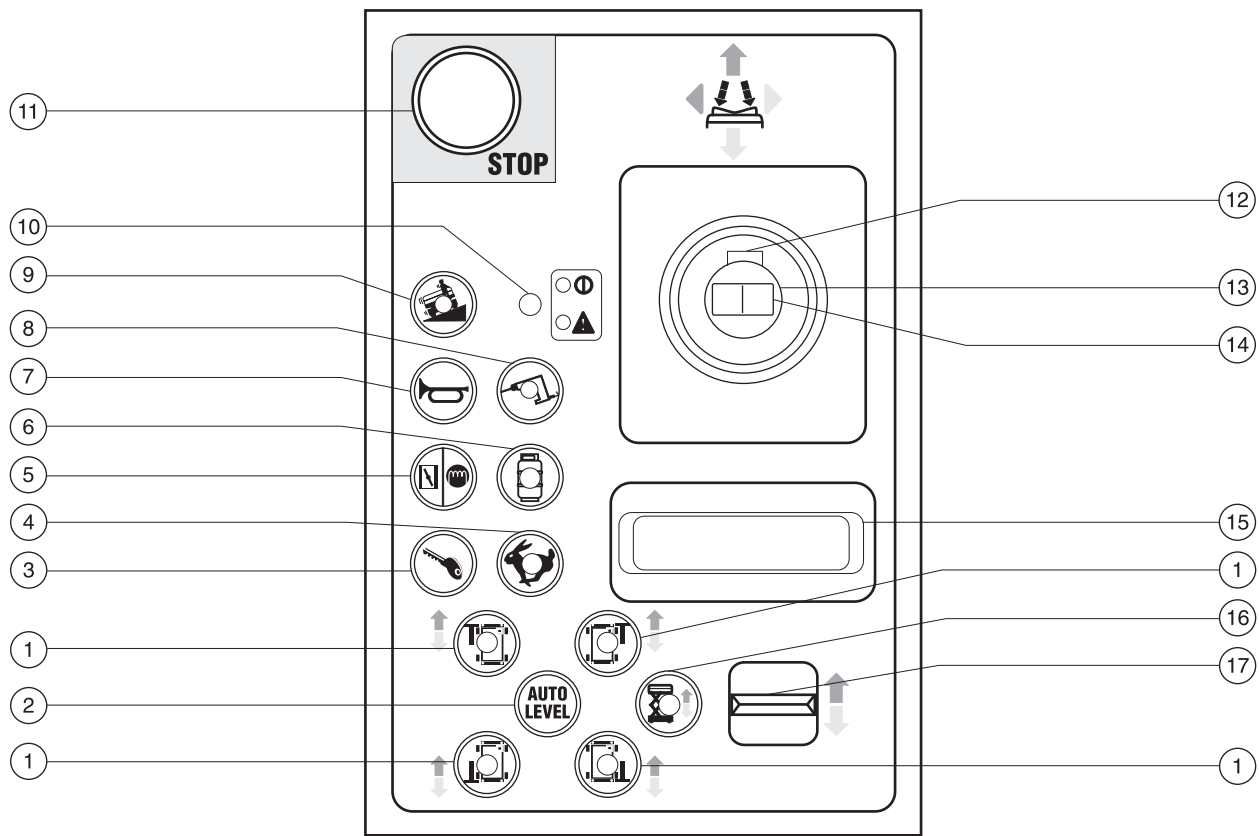

Platform Control Panel

- | | |
|---|---|
| <ul style="list-style-type: none"> 1 Outrigger function enable button with indicator light 2 Outrigger auto level button 3 Engine start button 4 Engine idle select button with indicator light 5 Gasoline/LPG models: Choke button
Diesel models: Glow plug button 6 Gasoline/LPG models: LPG operation button with indicator light 7 Horn button 8 Generator select button with indicator light | <ul style="list-style-type: none"> 9 Machine on incline button with indicator light: Low speed operation for inclines 10 Green power light/Red error indicator light 11 Red Emergency Stop button 12 Function enable switch 13 Proportional control handle for drive function 14 Thumb rocker switch for steer function 15 Wrist rest 16 Lift function enable button with indicator light 17 Proportional rocker switch for outrigger up/down and platform up/down |
|---|---|

Controls

Platform Control Panel

- 1 Outrigger function enable button with indicator light
Press this button to activate the individual outrigger up/down function.
- 2 Outrigger auto level button
Press this button to activate the auto level function.
- 3 Engine start button
Press this button to start the engine.
- 4 Engine idle select button with indicator light
Press this button to select the engine idle setting. Light on indicates high idle is selected. Light off indicates low idle is selected.
- 5 Gasoline/LPG models: Choke button
Press this button to aid in starting the engine in cold conditions.
Diesel models: Glow plug button
Press this button to aid in starting the engine in cold conditions.
- 6 Gasoline/LPG models: LPG select button with indicator light
Press this button to select LPG.
- 7 Horn button
Press this button and the horn will sound. Release the button and the horn will stop.
- 8 Generator select button with indicator light
Press this button to turn the generator on. Indicator light will be on. Press the button again to turn the generator off.
- 9 Machine on incline button with indicator light: Low speed operation for inclines
Press this button to select low speed operation for inclines.
- 10 Green power light/Red error indicator light
Green power light is on when Red Emergency Stop button is pulled out to the on position.
If red error indicator light is on, push in and pull out the Red Emergency Stop button to set the system. If the light stays red, tag and remove the machine from service.
- 11 Red Emergency Stop button
Push in the red Emergency Stop button to the off position to stop all functions and turn the engine off. Pull out the red Emergency Stop button to the on position to operate the machine.
- 12 Function enable switch
Press and hold the function enable switch to enable the drive function.

Controls

13 Proportional control handle for drive function

Move the control handle in the direction indicated by the blue arrow on the control panel and the machine will move in the direction that the blue arrow points. Move the control handle in the direction indicated by the yellow arrow on the control panel and the machine will move in the direction that the yellow arrow points.

14 Thumb rocker switch for steer function

Press the left side of the thumb rocker and the machine will steer to the left.

Press the right side of the thumb rocker and the machine will steer to the right.

15 Wrist rest

16 Lift function enable button with indicator light

Press this button to enable the lift function.

17 Proportional rocker switch for outrigger up/down and platform up/down

With the auto level button indicator light on, move the rocker switch up and the outriggers will raise. Move the rocker switch down and the outriggers will lower.

With an individual outrigger enable button indicator light on, move the rocker switch up and the outrigger will raise. Move the rocker switch down and the outrigger will lower.

With the lift function enable button indicator light on, move the rocker switch up and the platform will raise. Move the rocker switch down and the platform will lower.

Inspections



Do Not Operate Unless:

- You learn and practice the principles of safe machine operation contained in this operator's manual.
 - 1 Avoid hazardous situations.
 - 2 Always perform a pre-operation inspection.**
 - Know and understand the pre-operation inspection before going on to the next section.**
 - 3 Always perform function tests prior to use.
 - 4 Inspect the workplace.
 - 5 Only use the machine as it was intended.

Pre-operation Inspection Fundamentals

It is the responsibility of the operator to perform a pre-operation inspection and routine maintenance.

The pre-operation inspection is a visual inspection performed by the operator prior to each work shift. The inspection is designed to discover if anything is apparently wrong with a machine before the operator performs the function tests.

The pre-operation inspection also serves to determine if routine maintenance procedures are required. Only routine maintenance items specified in this manual may be performed by the operator.

Refer to the list on the next page and check each of the items.

If damage or any unauthorized variation from factory delivered condition is discovered, the machine must be tagged and removed from service.

Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications. After repairs are completed, the operator must perform a pre-operation inspection again before going on to the function tests.

Scheduled maintenance inspections shall be performed by qualified service technicians, according to the manufacturer's specifications and the requirements listed in the responsibilities manual.

Inspections

Pre-operation Inspection

- Be sure that the operator's, safety and responsibilities manuals are complete, legible and in the storage container located in the platform.
- Be sure that all decals are legible and in place. See Inspections section.
- Check for hydraulic oil leaks and proper oil level. Add oil if needed. See Maintenance section.
- Check for battery fluid leaks and proper fluid level. Add distilled water if needed. See Maintenance section.
- Check for engine oil leaks and proper oil level. Add oil if needed. See Maintenance section.
- Check for battery fluid leaks and proper fluid level. Add distilled water if needed. See Maintenance section.

Check the following components or areas for damage, improperly installed or missing parts and unauthorized modifications:

- Electrical components, wiring and electrical cables
- Hydraulic hoses, fittings, cylinders and manifolds
- Drive motors
- Wear pads
- Tires and wheels
- Limit switches, alarms and horn
- Nuts, bolts and other fasteners
- Brake release components

- Safety arm
- Platform extension(s)
- Scissor pins and retaining fasteners
- Platform control joystick
- Outrigger housing and footpads (if equipped)
- Fuel and hydraulic tanks
- Engine and related components
- Platform entry gate (if platform guard rails are installed)
- Lanyard anchorage points
- Generator (if equipped)
- Alarms and beacons (if equipped)

Check entire machine for:

- Cracks in welds or structural components
- Dents or damage to machine
- Excessive rust, corrosion or oxidation
- Be sure that all structural and other critical components are present and all associated fasteners and pins are in place and properly tightened.
- Be sure side rails are installed, and snap pins and bolts are fastened (if platform rails are installed).

Note: If the platform must be raised to inspect the machine, make sure the safety arm is in place. See Operating Instructions section.

Inspections



Do Not Operate Unless:

- ☑ You learn and practice the principles of safe machine operation contained in this operator's manual.
 - 1 Avoid hazardous situations.
 - 2 Always perform a pre-operation inspection.
 - 3 **Always perform function tests prior to use.**

Know and understand the function tests before going on to the next section.

- 4 Inspect the workplace.
- 5 Only use the machine as it was intended.

Function Test Fundamentals

The function tests are designed to discover any malfunctions before the machine is put into service. The operator must follow the step-by-step instructions to test all machine functions.

A malfunctioning machine must never be used. If malfunctions are discovered, the machine must be tagged and removed from service. Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications.

After repairs are completed, the operator must perform a pre-operation inspection and function tests again before putting the machine into service.

Inspections

At the Ground Controls

- 1 Select a test area that is firm, level and free of obstruction.
- 2 Pull out the platform and ground red Emergency Stop button to the on position.
- 3 Turn the key switch to ground control.
- ⊙ Result: The LCD screen will come on and display SYSTEM READY.

Note: In cold climates, the LCD readout screen will need to warm up before the display appears.

- 4 Start the engine. See Operating Instructions section.

Test Emergency Stop

- 5 Push in the red Emergency Stop button to the off position.
- ⊙ Result: The engine should shut off and no functions should operate.
- 6 Pull out the red Emergency Stop button to the on position and restart the engine.

Test the Up/Down Functions

The audible warnings on this machine and the standard horn all come from the same central alarm. The horn is a constant tone. The descent alarm sounds at 60 beeps per minute. The alarm that goes off when the machine is not level sounds at 180 beeps per minute.

- 7 Do not press the lift function enable button. Press and hold the platform up button.



- ⊙ Result: The platform should not raise.

- 8 Press and hold the lift function enable button. Press and hold the platform up button.
- ⊙ Result: The platform should not raise.
- 9 Press and hold the lift function enable button. Press and hold the platform down button.
- ⊙ Result: The platform should lower. The descent alarm should sound while the platform is lowering.
- 10 Turn the key switch to platform control.

At the Platform Controls

Test Emergency Stop

- 11 Push in the platform red Emergency Stop button to the off position.
- ⊙ Result: The engine should shut off and no functions should operate.
- 12 Pull out the red Emergency Stop button to the on position and restart the engine.
- ⊙ Result: The indicator light should be green.




Test the Horn

- 13 Press the horn button.
- ⊙ Result: The horn should sound.

Inspections

Test Up/Down Functions and Function Enable

- 14 Start the engine.
- 15 Activate the up/down rocker switch in the direction indicated by the blue arrow.
- ⊙ Result: The platform should not raise.
- 16 Press and hold the lift function enable button. 
- 17 Activate the up/down rocker switch in the direction indicated by the blue arrow.
- ⊙ Result: The platform should raise.
- 18 Press and hold the lift function enable button.
- 19 Activate the up/down rocker switch in the direction indicated by the yellow arrow.
- ⊙ Result: The platform should lower. The descent alarm should sound while the platform is lowering.

Test the Steering

Note: When performing the steer and drive function tests, stand in the platform facing the steer end of the machine.

- 20 Press and hold the function enable switch on the control handle.
- 21 Press the thumb rocker switch on top of the control handle in the direction indicated by the blue triangle on the control panel.
- ⊙ Result: The steer wheels should turn in the direction indicated by the blue triangle.
- 22 Press the thumb rocker switch in the direction indicated by the yellow triangle on the control panel.
- ⊙ Result: The steer wheels should turn in the direction indicated by the yellow triangle.

Test Drive and Braking

- 23 Press and hold the function enable switch on the control handle.
- 24 Slowly move the drive control handle in the direction indicated by the blue arrow on the control panel until the machine begins to move, then return the handle to the center position.
- ⊙ Result: The machine should move in the direction that the blue arrow points on the control panel, then come to an abrupt stop.
- 25 Press and hold the function enable switch on the control handle.
- 26 Slowly move the control handle in the direction indicated by the yellow arrow on the control panel until the machine begins to move, then return the handle to the center position.
- ⊙ Result: The machine should move in the direction that the yellow arrow points on the control panel, then come to an abrupt stop.

Note: The brakes must be able to hold the machine on any slope it is able to climb.


Test Limited Drive Speed

- 27 Press and hold the lift function enable button. Raise the platform at least 6 ft / 1.8 m.
- 28 Press and hold the function enable switch on the control handle.
- 29 Slowly move the control handle to full drive position.
- ⊙ Result: The maximum achievable drive speed with the platform raised should not exceed 1.03 ft / 31 cm/s.

If the drive speed with the platform raised exceeds 1.03 ft / 31 cm/s, immediately tag and remove the machine from service.

Inspections

Test the Up Limit Switch and the Outriggers - GS-5390

- 30 Push and hold the lift function enable button. Raise the platform.
- ⊙ Result: The platform should raise to 30 ft / 9.1 m and then stop. The platform should not raise above 30 ft / 9.1 m unless the outriggers are lowered.
- 31 Drive the machine forward.
- ⊙ Result: The drive function should not operate.
- 32 Lower the platform. If the platform is higher than 12 ft / 3.6 m from the ground, the outriggers will not lower.
- 33 Push and hold the auto level button. 
- 34 Activate the up/down rocker switch in the down direction.
- ⊙ Result: The outriggers should extend and level the machine. A beep will sound when the machine is level.
- 35 Raise the platform.
- ⊙ Result: The platform should raise to full height.
- 36 Lower the platform.
- 37 Push and hold the auto level button and raise the outriggers.

Test the Tilt Sensor Operation

Note: Perform this test from the ground with the platform controller. Do not stand in the platform.

- 38 Fully lower the platform.
- 39 Drive both wheels on one side onto a 7 in / 18 cm block or onto a curb.
- 40 Raise the platform at least 12 ft / 3.6 m.
- ⊙ Result: The platform should stop and the tilt alarm will sound at 180 beeps per minute. The indicator light on the lift function enable button will be red.
- 41 Move the drive control handle in the direction indicated by the blue arrow, then move the drive control handle in the direction indicated by the yellow arrow.
- ⊙ Result: The drive function should not work in either direction.
- 42 Lower the platform and drive the machine off the block.

Test Emergency Lowering

- 43 Push and hold the lift function enable button and raise the platform approximately 2 ft / 60 cm.
- 44 Push in the red Emergency Stop button to shut off the engine.
- 45 Pull out the red Emergency Stop button to the on position.
- 46 Press and hold the lift function enable button. Activate the up/down rocker switch in the direction indicated by the yellow arrow.
- ⊙ Result: The platform should lower.

Inspections



Do Not Operate Unless:

- ☑ You learn and practice the principles of safe machine operation contained in this operator's manual.
 - 1 Avoid hazardous situations.
 - 2 Always perform a pre-operation inspection.
 - 3 Always perform function tests prior to use.
 - 4 **Inspect the workplace.**
Know and understand the workplace inspection before going on to the next section.
 - 5 Only use the machine as it was intended.

Workplace Inspection Fundamentals

The workplace inspection helps the operator determine if the workplace is suitable for safe machine operation. It should be performed by the operator prior to moving the machine to the workplace.

It is the operator's responsibility to read and remember the workplace hazards, then watch for and avoid them while moving, setting up and operating the machine.

Workplace Inspection Checklist

Be aware of and avoid the following hazardous situations:

- drop-offs or holes
- bumps, floor obstructions or debris
- sloped surfaces
- unstable or slippery surfaces
- overhead obstructions and high voltage conductors
- hazardous locations
- inadequate surface support to withstand all load forces imposed by the machine
- wind and weather conditions
- the presence of unauthorized personnel
- other possible unsafe conditions

Inspections

Decals Inspection with Words

Use the appropriate inspection to verify that all decals are legible and in place.


Below is a numerical list with quantities and descriptions.

Part No.	Decal Description	Qty
25994	Notice – Component Damage Hazard	1
28158	Label – Unleaded	1
28159	Label – Diesel	1
28160	Label – Liquid Petroleum Gas	1
28174	Label – Power to Platform, 230V	3
28175	Warning – Compartment Access	1
28176	Label – Missing Manuals	1
28235	Label – Power to Platform, 115V	3
28236	Warning – Improper Operation	1
31060	Danger – Tip-over Hazard, Limit Switch	1
40434	Label – Lanyard Anchorage Point	8
43618	Label – Directional Arrows	1
43619	Label – Safety Arm	1
44255	Danger – Crushing Hazard	4
44736	Danger – Tip-over Hazard, Tilt Alarm	1
44981	Label – Air Line to Platform	2
52431	Label – Ground Control Panel	1
52475	Label – Transport Tie-down	4
52494	Caution – Crushing Hazard, Rails	1
52967	Cosmetic – 4 x 4	2
62748	Cosmetic – Genie GS-4390	2
65061	Cosmetic – Genie GS-5390	2
65063	Notice – Tire Specifications	4
65281	Notice – Max Side Force, ANSI & CSA GS-4390	2
72186	Warning – Crushing Hazard, Outriggers	4
72816	Notice – Maximum Capacity, 1500 lbs / 600 kg	2
72818	Label – Test Mode Switch	1
72847	Notice – Tire Specifications, High Floatation	4
72853	Danger – Improper Use Hazard	1
72860	Notice – Max. Side Force, ANSI & CSA, GS-5390	2
72868	Label – Engine Tray Prop	1

Part No.	Decal Description	Qty
82210	Cosmetic – Genie GS-3384	2
82211	Notice – Max. Side Force, ANSI & CSA, GS-3384, GS-3390	2
82213	Notice – Maximum Capacity, 2500 lbs / 1134 kg	2
82215	Notice – Tire Specifications	4
82224	Label – HOT, Ford Tier II Engines	1
82366	Label – Chevron Rando	1
82417	Platform Control Panel	1
82418	Ground Control Panel	1
82557	Label – Platform Controls Location	1
82558	Warning – Skin Injection Hazard	1
82559	Instructions – Annual Inspection	1
82561	Danger – Crushing Hazard	2
82757	Danger – Outrigger Safety and Instructions	1
82793	Instructions – Operating Instructions, Ground	1
82798	Ground Control Panel	1
82809	Label – Wheel Load, GS-3384	4
82824	Label – Wheel Load, GS-3390, GS-4390	4
82825	Label – Wheel Load, GS-5390	4
97548	Instructions – Deutz Engine Specifications (F3L 2011 & D2011 L03i) Tier II	1
97602	Warning – Explosion Hazard	1
97753	Cosmetic – Genie GS-3390	2
97763	Notice – Max. Side Force, AUS, GS-3384, GS-3390, GS-4390	2
97764	Notice – Max. Side Force, AUS, GS-5390	2
114169	Instructions – Ford Engine Specifications (DSG-423)	1
114258	Danger – Explosion Hazard	1
114385	Danger – Electrocutation Hazard	2
114386	Danger – General Safety Rules	1

Continued on next page.

Inspections

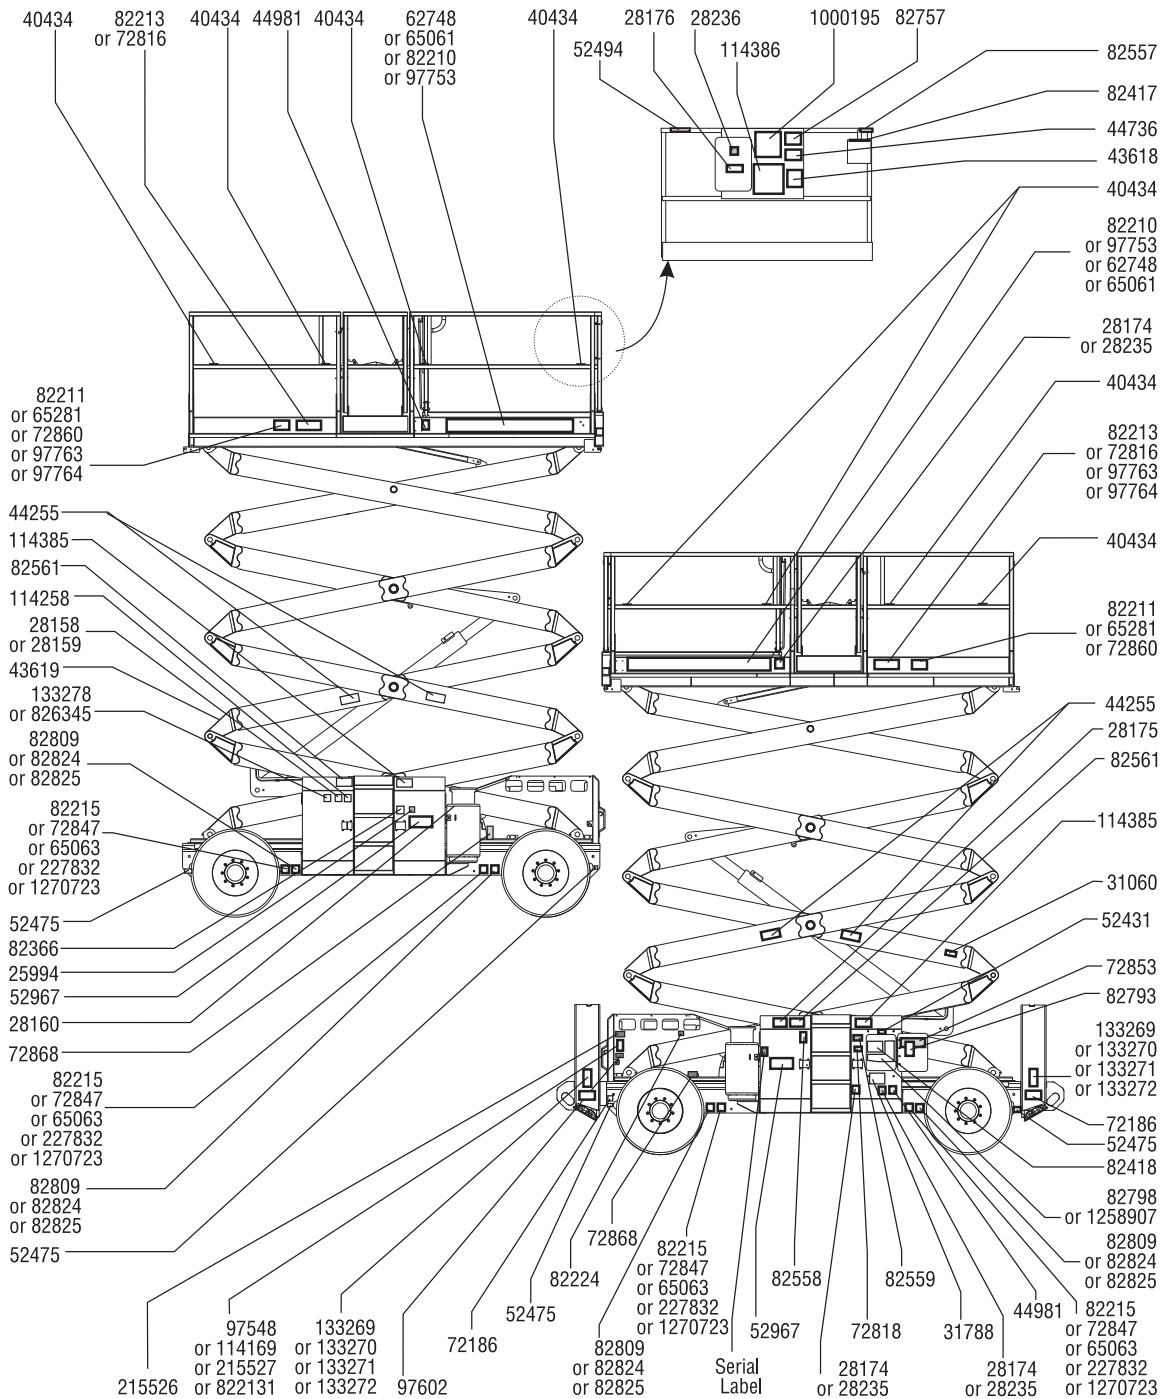

■ Shading indicates decal is hidden from view, i.e. under covers



Inspections

Decals Inspection with Words


Continued from previous page.

Use the appropriate inspection to verify that all decals are legible and in place.

Below is a numerical list with quantities and descriptions.

Part No.	Decal Description	Qty
133269	Label – Outrigger Load, GS-3384	4
133270	Label – Outrigger Load, GS-3390	4
133271	Label – Outrigger Load, GS-4390	4
133272	Label – Outrigger Load, GS-5390	4
133278	Label – Low Sulfur Fuel (diesel models)	1
215526	Label – Belt Routing (MSG-425)	1
215527	Instructions – Ford Engine Specifications (MSG-425)	1
822131	Instructions - Deutz Engine Specifications (D2.9 L4)	1
826345	Label – Ultra Low Sulfur Fuel Only (diesel models)	1
1000195	Instructions – Operation, Platform Control	1
1258907	Ground Control Panel, Models with LCD Screen	1
1270723	Danger - Tip-over, Tire Specifications	4

Inspections

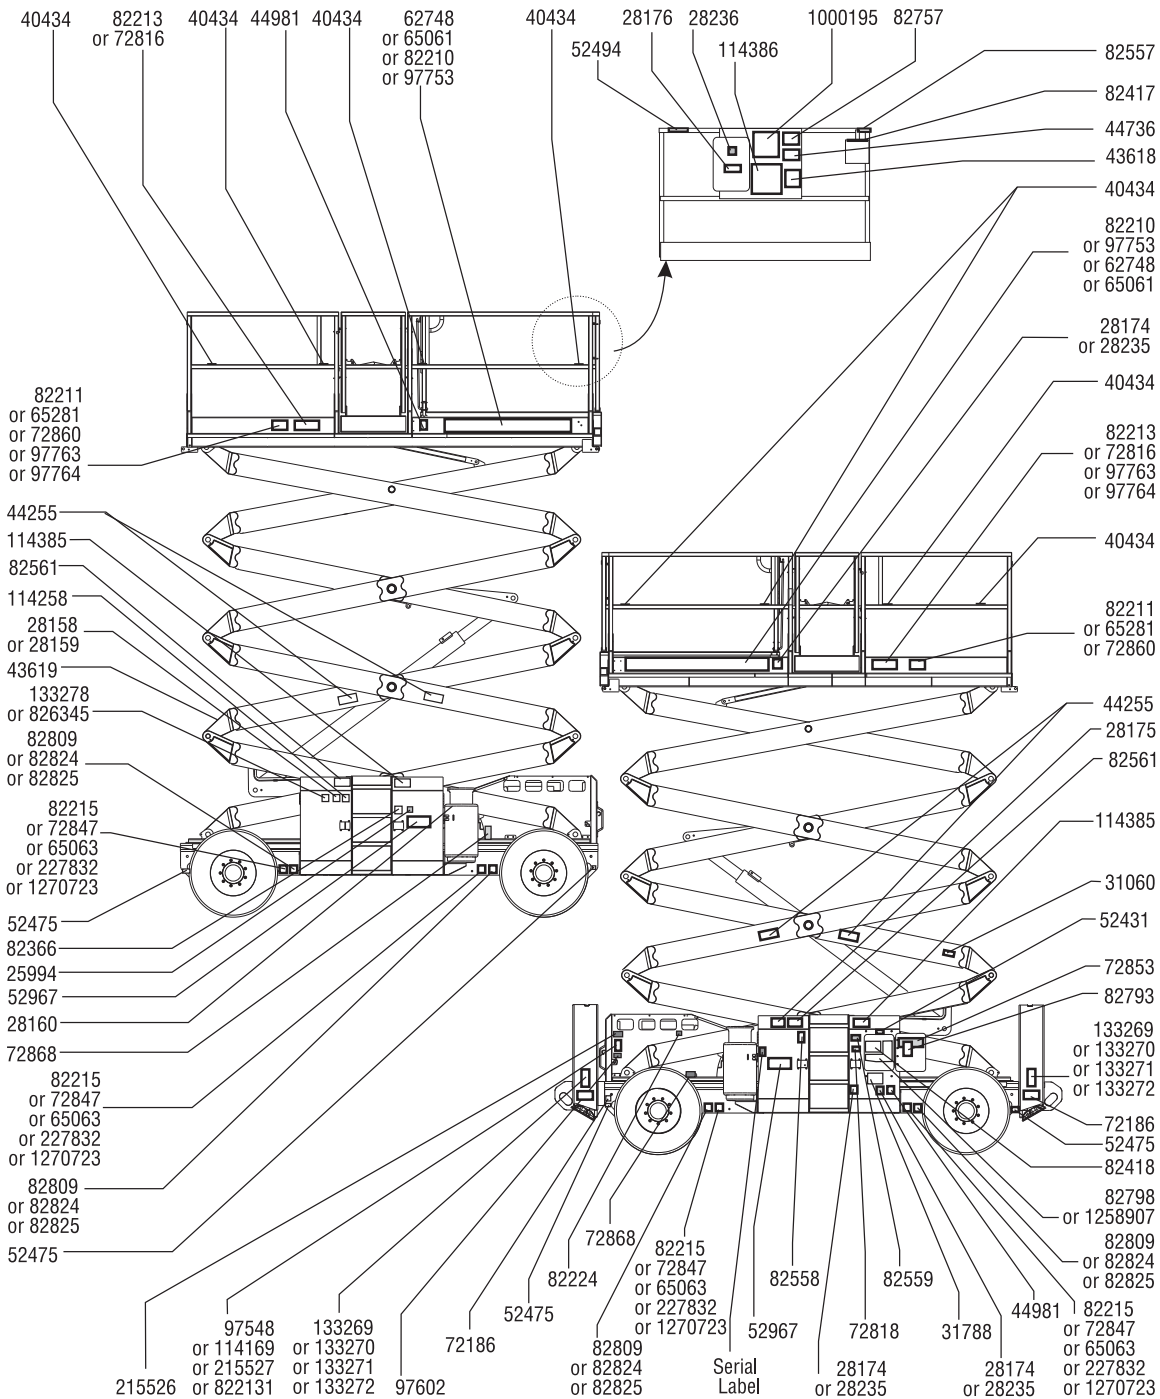

■ Shading indicates decal is hidden from view, i.e. under covers



Inspections

Decals Inspection with Symbols


Use the appropriate inspection to verify that all decals are legible and in place.

Below is a numerical list with quantities and descriptions.

Part No.	Decal Description	Qty
28158	Label – Unleaded	1
28159	Label – Diesel	1
28160	Label – Liquid Petroleum Gas (1 additional with extra LPG tank option)	1
28174	Label – Power to Platform, 230V	3
28235	Label – Power to Platform, 115V	3
40434	Label – Lanyard Anchorage Point	8
43618	Label – Directional Arrows	1
44981	Label – Air Line to Platform	2
52475	Label – Transport Tie Down	4
52967	Cosmetic – 4 x 4	2
62748	Cosmetic – Genie GS-4390	2
65061	Cosmetic – Genie GS-5390	2
72868	Label – Engine Tray Prop	1
82210	Cosmetic – Genie GS-3384	2
82417	Platform Control Panel	1
82418	Ground Control Panel	1
82473	Label – Compartment Access	2
82474	Label – Use Safety Chock	2
82475	Label – Crushing Hazard, Outriggers	4
82476	Label – Electrocution Hazard	2
82481	Label – Battery/Charger Safety	1
82487	Label – Read the Manual	2
82560	Label – Skin Injection Hazard	1
82562	Label – Crushing Hazard	4
82756	Label – Tire Pressure, High Floatation	4
82798	Ground Control Panel	1
82924	Label – Shut-off Valves	1
82808	Label – Maximum Capacity, 1134 kg	2
82809	Label – Wheel Load, GS-3384	4
82810	Danger – Max. Side Force, 1557 N, ANSI	2
82812	Label – Read the Service Manual	1
82819	Danger – Max. Side Force, 1335 N, GS-5390, ANSII	2

Part No.	Decal Description	Qty
82820	Danger – Max. Capacity, 680 kg, GS-4390, ANSI	2
82822	Danger – Max. Capacity, 680 kg, GS-5390, ANSI	2
82824	Label – Wheel Load, GS-3390, GS-4390	4
82825	Label – Wheel Load, GS-5390	4
97709	Label – Hot	1
97719	Label – Safety Arm	1
97753	Cosmetic – Genie GS-3390	1
114251	Label – Explosion Hazard	1
114371	Label – Outrigger Safety	1
114337	Label – Tip-over Hazard, Limit Switch	1
114338	Label – Tip-over Hazard, Tilt Alarm	1
133269	Label – Outrigger Load, GS-3384	4
133270	Label – Outrigger Load, GS-3390	4
133271	Label – Outrigger Load, GS-4390	4
133272	Label – Outrigger Load, GS-5390	4
133537	Label – Crushing Hazard	1
215526	Label – Belt Routing (MSG-425)	1

Inspections

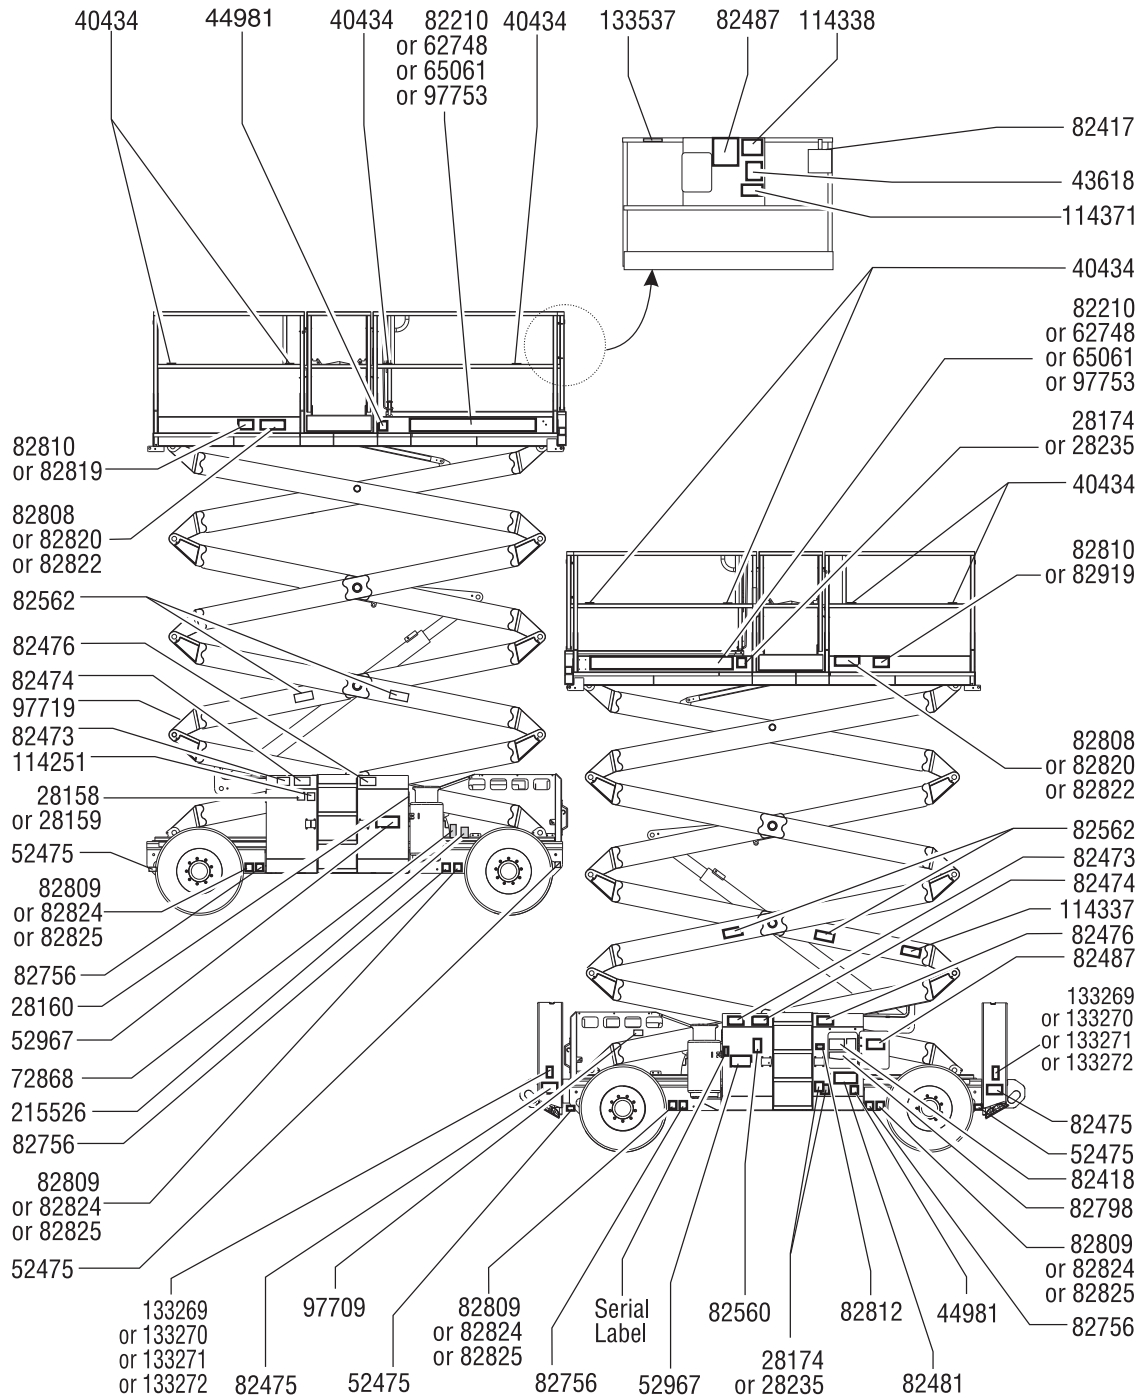

■ Shading indicates decal is hidden from view, i.e. under covers



Operating Instructions



Do Not Operate Unless:

- You learn and practice the principles of safe machine operation contained in this operator's manual.
 - 1 Avoid hazardous situations.
 - 2 Always perform a pre-operation inspection.
 - 3 Always perform function tests prior to use.
 - 4 Inspect the workplace.
 - 5 **Only use the machine as it was intended.**

Fundamentals

The Operating Instructions section provides instructions for each aspect of machine operation. It is the operator's responsibility to follow all the safety rules and instructions in the operator's, safety and responsibilities manuals.

Using the machine for anything other than lifting personnel, along with their tools and materials, to an aerial work site is unsafe and dangerous.

Only trained and authorized personnel should be permitted to operate a machine. If more than one operator is expected to use a machine at different times in the same work shift, they must all be qualified operators and are all expected to follow all safety rules and instructions in the operator's, safety and responsibilities manuals. That means every new operator should perform a pre-operation inspection, function tests, and a workplace inspection before using the machine.

Operating Instructions

Emergency Stop

Push in the red Emergency Stop button to the off position at the ground controls or the platform controls to stop all machine functions and turn the engine off.

Repair any function that operates when either red Emergency Stop button is pushed in.

Starting the Engine

- 1 At the ground controls, turn the key switch to the desired position.
- 2 Be sure both ground and platform control red Emergency Stop buttons are pulled out to the on position.

Gasoline/LPG models

- 1 Select LPG by pushing the LPG button.
- 2 Press the engine start button.

Note: In cold conditions, 20°F / -6°C and below, the machine should be started on gasoline and warmed for 2 minutes, then switched to LPG. Warm engines can be started on LPG.

Diesel models

- 1 Press the engine start button.

Note: In cold condition, 50°F / 10°C and below, push and hold the glow plug button for 5 to 10 seconds before starting the engine. Limit continuous use of the glow plug button to 20 seconds.

All models

If the engine fails to start after 15 seconds of cranking, determine the cause and repair any malfunction. Wait 60 seconds before trying to start again.

In cold conditions, 20°F / -6°C and below, warm the engine for 5 minutes before operating to prevent hydraulic system damage.

In extreme cold conditions, 0°F / -18°C and below, machines should be equipped with optional cold start kits. Attempting to start the engine when temperatures are below 0°F / -18°C may require the use of a booster battery.

Operation from Ground

- 1 Turn the key switch to ground control.
- 2 Pull out both ground and platform red Emergency Stop buttons to the on position.
- 3 Start the engine.

To Position Platform

- 1 Push and hold the lift function enable button.
- 2 Activate the up function or the down function.



Drive and steer functions are not available from the ground controls.

Operating Instructions

Engine Idle Select

Select the engine idle (rpm) by pressing the idle select button. There are three settings for engine idle:

- Indicator light off: low idle
- Indicator light blinking: high idle activated by any function enable button
- Indicator light on: high idle



Operation from Platform

- 1 Turn the key switch to platform control.
- 2 Pull out both ground and platform red Emergency Stop buttons to the on position.
- 3 Start the engine.

To Position Platform

- 1 Push and hold the lift function enable button.
- 2 Activate the up/down rocker switch in the desired direction.



To Steer

- 1 Press and hold the function enable switch on the control handle.
- 2 Turn the steer wheels with the thumb rocker switch located on the top of the control handle.

To Drive

- 1 Press and hold the function enable switch on the control handle.
- 2 Increase speed: Slowly move the control handle off center.

Decrease speed: Slowly move the control handle toward center.

Stop: Return the control handle to center or release the function enable switch.

Use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction the machine will travel.

Machine travel speed is restricted when the platform is raised.

Drive Select Button



Machine on incline symbol: Low range operation for inclines.

Indicator Light On Red



If the indicator light is on red, push in and pull out the red Emergency Stop button to reset the system.


If the light stays red, tag and remove the machine from service.

Operating Instructions


▲ Driving on a slope

Determine the slope and side slope ratings for the machine and determine the slope grade.

Maximum slope rating, stowed position:

	GS-3384, GS-3390, GS-4390	50%	26°
	GS-5390	40%	22°

Maximum side slope rating, stowed position:

	GS-3384, GS-3390, GS-4390	50%	26°
	GS-5390	40%	22°

Note: Slope rating is subject to ground conditions and adequate traction.

To determine the slope grade:

Measure the slope with a digital inclinometer OR use the following procedure.

You will need:

- carpenter's level
- straight piece of wood, at least 3 feet / 1 m long
- tape measure


Lay the piece of wood on the slope.

At the downhill end, lay the level on the top edge of the piece of wood and lift the end until the piece of wood is level.

While holding the piece of wood level, measure the vertical distance from the bottom of the piece of wood to the ground.

Divide the tape measure distance (rise) by the length of the piece of wood (run) and multiply by 100.

Example:

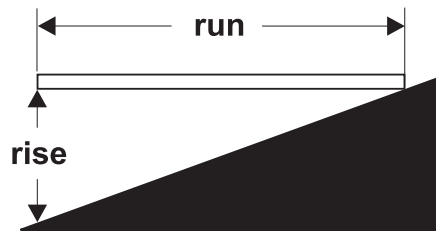

Piece of wood = 144 inches (3.6 m)

Run = 144 inches (3.6 m)

Rise = 12 inches (0.3 m)

$12 \text{ in} \div 144 \text{ in} = 0.083 \times 100 = 8.3\% \text{ grade}$

$0.3 \text{ m} \div 3.6 \text{ m} = 0.083 \times 100 = 8.3\% \text{ grade}$

If the slope exceeds the maximum slope or side slope rating, then the machine must be winched or transported up or down the slope. See Transport and Lifting section.

Operating Instructions

To Extend and Retract Platform

- 1 Lift the platform extension lock handles to the horizontal position.
- 2 Push the platform extension lock handles to extend the platform to the desired position.

Do not stand on the platform extension while trying to extend it.

- 3 Lower the platform extension lock handles.

Operation from Ground with Controller

Maintain safe distances between the operator, machine and fixed objects.

 
Be aware of the direction the machine will travel when using the controller.

Emergency Lowering

At the Ground Controls

Push and hold the lift function enable button and activate the down function.

In the event of a power failure, use the emergency lowering function.



At the Platform Controls

Push and hold the lift function enable button and activate the up/down rocker switch in the down direction.

Operating Instructions

Outrigger Operation (if equipped)

- 1 Position the machine below the desired work area.

Note: The engine must be running for the outriggers to operate.

- 2 Push and hold the auto level button.



- 3 Activate the up/down rocker switch in the down direction. The outriggers will extend and level the machine. A beep will sound when the machine is level.

The indicator light on the lift function enable button will turn red when one but not all outriggers are down. All drive and lift functions are disabled.



The light turns green on the lift function enable button and on the individual outrigger buttons when all the outriggers are in firm contact with the ground.

The drive function is disabled while the outriggers are down.

To control individual outriggers

- 1 Push and hold one or more outrigger buttons.
- 2 Active the outrigger up/down rocker switch in the desired direction to level the machine.

After Each Use

- 1 Select a safe parking location—firm level surface, clear of obstruction and traffic.
- 2 Lower the platform.
- 3 Turn the key switch to the off position and remove the key to secure from unauthorized use.

Transport and Lifting Instructions



Observe and Obey:


- ☑ Genie provides this securement information as a recommendation. Drivers are solely responsible for making sure machines are properly secured and the correct trailer is selected pursuant to US Department of Transportation regulations, other localized regulations, and their company policy.
- ☑ Genie customers needing to containerize any lift or Genie product should source a qualified freight forwarder with expertise in preparing, loading and securing construction and lifting equipment for international shipment.
- ☑ Only qualified aerial lift operators should move the machine on or off the truck.
- ☑ The transport vehicle must be parked on a level surface.
- ☑ The transport vehicle must be secured to prevent rolling while the machine is being loaded.
- ☑ Be sure the vehicle capacity, loading surfaces and chains or straps are sufficient to withstand the machine weight. Genie lifts are very heavy relative to their size. See the serial label for the machine weight.
- ☑ If the slope of the transport vehicle bed exceeds the maximum slope rating, the machine must be loaded and unloaded using a winch as described in the brake release operation.

Free-wheel Configuration for Winching

Chock the wheels to prevent the machine from rolling.

2WD models: Release the non-steer wheel brakes by turning over the drive hub disconnect caps.

4WD models: Release the wheel brakes by turning over all four torque hub disconnect caps.

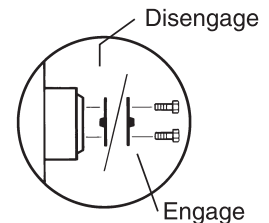

Be sure the winch line is properly secured to the drive chassis tie points and the path is clear of all obstructions.

Reverse the procedures described to re-engage the brakes.

Note: The pump free-wheel valve should always remain closed during normal operation.

Transport and Lifting Instructions

Securing to Truck or Trailer for Transit

Always chock the machine wheels in preparation for transport.

Retract and secure the extension deck(s).

Use the tie-down points on the chassis for anchoring down to the transport surface.



Use a minimum of 4 chains or straps.

Use chains or straps of ample load capacity.

Turn the key switch to the off position and remove the key before transporting.

Inspect the entire machine for loose or unsecured items.

If the railings have been folded down, secure them with straps before transporting.

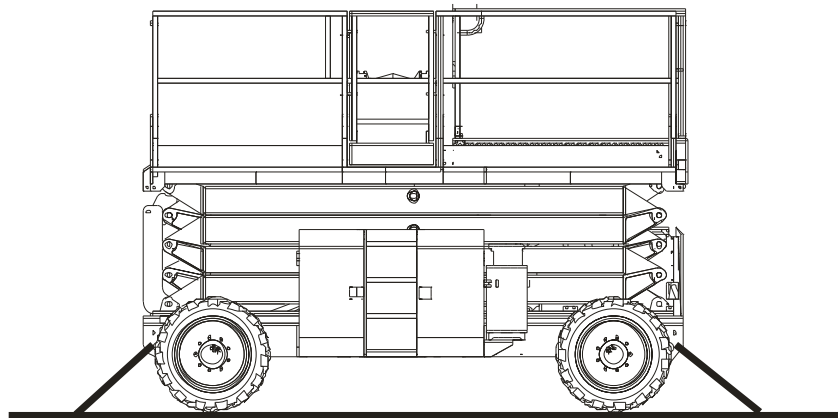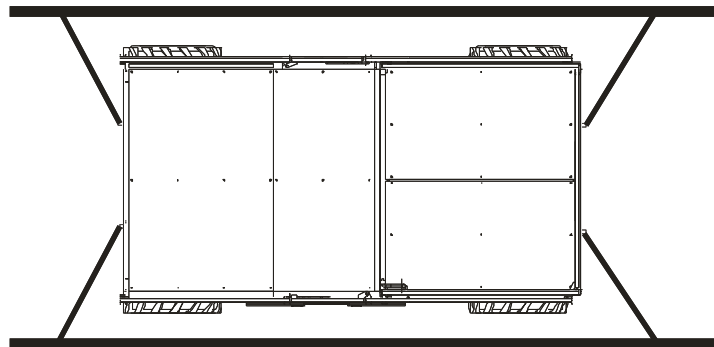

Transport and Lifting Instructions



Observe and Obey:

- ☑ Only qualified riggers should rig and lift the machine.
- ☑ Be sure the crane capacity, loading surfaces and straps or lines are sufficient to withstand the machine weight. See the serial label for the machine weight.


Lifting Instructions

Fully lower the platform. Be sure the extension deck, controls and component trays are secure. Remove all loose items on the machine.

Determine the center of gravity of your machine using the table and the picture on this page.

Attach the rigging only to the designated lifting points on the machine.

Adjust the rigging to prevent damage to the machine and to keep the machine level.

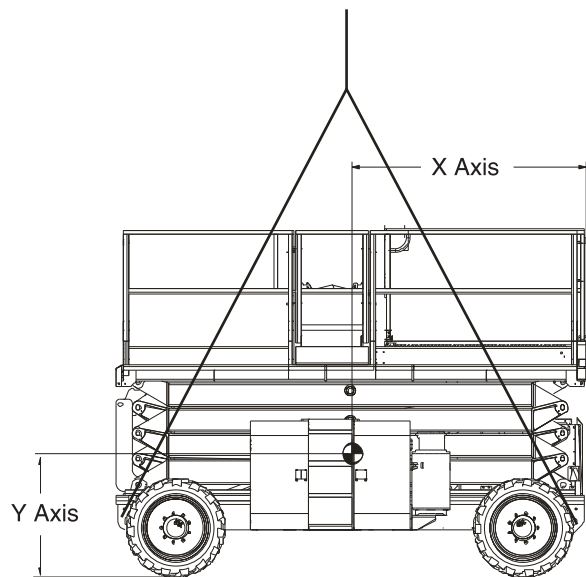

Center of gravity	X Axis	Y Axis
GS-3384 and GS-3390 without outriggers	74.7 in 1.8 m	38.2 in 97.0 cm
GS-4390 without outriggers	74.7 in 1.8 m	42.1 in 1.0 m
GS-3384 and GS-3390 with outriggers	75.1 in 1.9 m	37.2 in 94.5 cm
GS-4390 with outriggers	75.1 in 1.9 m	39.8 in 1.0 m
GS-5390	76.0 in 1.9 m	42.7 in 1.0 m

Maintenance



Observe and Obey:

- ☑ Only routine maintenance items specified in this manual shall be performed by the operator.
- ☑ Scheduled maintenance inspections shall be completed by qualified service technicians, according to the manufacturer's specifications and the requirements specified in the responsibilities manual.
- ☑ Dispose of material in accordance with governmental regulations.
- ☑ Use only Genie approved replacement parts.

Maintenance Symbols Legend

The following symbols have been used in this manual to help communicate the intent of the instructions. When one or more of the symbols appear at the beginning of a maintenance procedure, it conveys the meaning below.



Indicates that tools will be required to perform this procedure.



Indicates that new parts will be required to perform this procedure.



Indicates that a cold engine is required before performing this procedure.

Check the Batteries



Proper battery condition is essential to good machine performance and operational safety. Improper fluid levels or damaged cables and connections can result in component damage and hazardous conditions.

Note: This procedure does not need to be performed on machines with sealed or maintenance-free batteries.

- ▲ Electrocution hazard. Contact with hot or live circuits may result in death or serious injury. Remove all rings, watches and other jewelry.
- ▲ Bodily injury hazard. Batteries contain acid. Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda and water.

Note: Perform this test after fully charging the batteries.

- 1 Put on protective clothing and eye wear.
- 2 Be sure that the battery cable connections are tight and free of corrosion.
- 3 Be sure that the battery hold-down brackets are in place and secure.

Note: Adding terminal protectors and a corrosion preventative sealant will help eliminate the corrosion on the battery terminals and cables.

Maintenance

Check the Engine Oil Level



Maintaining the proper engine oil level is essential to good engine performance and service life. Operating the machine with an improper oil level can damage engine components.

Note: Check the oil level with the engine off.

- 1 Check the oil level dipstick. Add oil as needed.

Deutz D2.9 L4 Engine

Oil type	15W-40
Oil type - cold conditions	5W-40

Deutz DL2011 L03i Engine

Oil type	15W-40
Oil type - cold conditions	5W-30

Ford LRG-423 EFI Engine

Oil type	10W-40
Oil type - cold conditions	5W-30

Ford MSG-425 EFI Engine

Oil type	5W-20
----------	-------

Diesel Fuel Requirements



Satisfactory engine performance is dependent on the use of a good quality fuel. The use of a good quality fuel will give the following result: long engine life and acceptable exhaust emissions levels.

Minimum diesel fuel requirements for each engine are listed below.

Deutz D2011 L03i Engine

Fuel Type	Low Sulfur Diesel (LSD)
-----------	-------------------------

Deutz D2.9 L4 Engine

Fuel Type	Ultra Low Sulfur Diesel (ULSD)
-----------	--------------------------------

Maintenance

Check the Hydraulic Oil Level



Maintaining the hydraulic oil at the proper level is essential to machine operation. Improper hydraulic oil levels can damage hydraulic components. Daily checks allow the inspector to identify changes in oil level that might indicate the presence of hydraulic system problems.

- 1 Be sure that the platform is in the stowed position and the engine off.
- 2 Visually inspect the sight gauge located on the side of the hydraulic oil tank.
- ⊙ Result: The hydraulic oil level should be within the top 2 inches / 5 cm of the sight gauge.
- 3 Add oil as needed. Do not overfill.

Hydraulic oil specifications

Hydraulic oil type	Chevron Rando HD equivalent
--------------------	-----------------------------

Check the Engine Coolant Level - Ford Models



Maintaining the engine coolant at the proper level is essential to engine service life. Improper coolant level will affect the engine's cooling capability and damage engine components. Daily checks will allow the inspector to identify changes in coolant level that might indicate cooling system problems.

- 1 Check the fluid level in the coolant recovery tank. Add fluid as needed.
- ⊙ Result: The fluid level should be visible in the top tank of the radiator.
- ▲ Burn hazard. Do not remove the radiator cap if the engine and/or radiator is warm. The engine and radiator should be cool to the touch before performing the coolant level inspection.

Maintenance

Scheduled Maintenance

Maintenance performed quarterly, annually and every two years must be completed by a person trained and qualified to perform maintenance on this machine according to the procedures found in the service manual for this machine.

Machines that have been out of service for more than three months must receive the quarterly inspection before they are put back into service.

Specifications

GS-3384

Height, working maximum	39 ft	11.9 m
Height, platform maximum	33 ft	10.1 m
Height, stowed maximum, rails up	105.5 in	2.7 m
Height, stowed maximum, rails lowered	78.75 in	2.0 m
Width, standard tires	84 in	2.1 m
Length, platform retracted Models with one extension deck	155.25 in	3.9 m
Length, platform extended Models with one extension deck	212.5 in	5.4 m
Length, platform retracted Models with two extension decks	156.5 in	3.9 m
Length, platform extended Models with two extension decks	258.5 in	6.6 m
Length, platform retracted Models with outriggers Models with two super decks	192 in	4.9 m
Length, platform extended Models with two super decks	290.5 in	7.4 m
Maximum load capacity	2500 lbs	1134 kg
Maximum wind speed	28 mph	12.5 m/s
Wheelbase	113.5 in	2.9 m
Turning radius (outside)	234 in	5.9 m
Turning radius (inside)	121.5 in	3.1 m
Ground clearance	13 in	33 cm

Weight

(Machine weights vary with option configurations. See serial label for specific machine weight.)

Platform dimensions

Platform length x width	150 in x 72 in	3.8 x 1.8 m
Platform extension length	60 in	1.5 m

Drive speeds

Stowed, maximum	4 mph	6.4 km/h
Platform raised, maximum	0.7 mph 40 ft / 39 sec	1.1 km/h 12.2 m / 39 sec
Controls	Proportional	
AC outlet in platform	Standard	
Maximum hydraulic pressure (functions)	3500 psi	241.3 bar
Tire size	10-16.5 NHS	
Tire size, high flotation	33/16LL500, 10 ply	

Maximum side slope rating, stowed position 50% (26°)

Maximum slope rating, stowed position 50% (26°)

Note: Slope rating is subject to ground conditions and adequate traction.

Floor loading information

Tire load maximum	4689 lbs	2127 kg
Outrigger load, maximum (If equipped)	4689 lbs	2127 kg
Tire contact pressure	129 psi	9.03 kg/cm ² 886 kPa
Occupied floor pressure	177 psf	864 kg/m ² 8.49 kPa

Note: Floor loading information is approximate and does not incorporate different option configurations. It should be used only with adequate safety factors.

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice or obligation.

Specifications

GS-3390

Height, working maximum	39 ft	11.9 m
Height, platform maximum	33 ft	10.1 m
Height, stowed maximum, rails up	105.5 in	2.7 m
Height, stowed maximum, rails lowered	78.75 in	2.0 m
Width, 315/55D20 tires	92 in	234 cm
Width, 12-33 tires	90 in	229 cm
Length, platform retracted Models with one extension deck	155.25 in	3.9 m
Length, platform extended Models with one extension deck	212.5 in	5.4 m
Length, platform retracted Models with two extension decks	156.5 in	3.9 m
Length, platform extended Models with two extension decks	258.5 in	6.6 m
Length, platform retracted Models with outriggers Models with two super decks	192 in	4.9 m
Length, platform extended Models with two super decks	290.5 in	7.4 m
Maximum load capacity	2500 lbs	1134 kg
Maximum wind speed	28 mph	12.5 m/s
Wheelbase	115 in	2.9 m
Turning radius (outside)	210 in	5.3 m
Turning radius (inside)	85 in	2.2 m
Ground clearance	14 in	36 cm

Weight

(Machine weights vary with option configurations. See serial label for specific machine weight.)

Platform dimensions

Platform length x width	150 in x 72 in	3.8 x 1.8 m
Platform extension length	60 in	1.5 m

Drive speeds

Stowed, maximum	4 mph	6.4 km/h
Platform raised, maximum	0.7 mph 40 ft / 39 sec	1.1 km/h 12.2 m / 39 sec
Controls	Proportional	
AC outlet in platform	Standard	
Maximum hydraulic pressure (functions)	3500 psi	241.3 bar
Tire size	10-16.5 NHS	
Tire size, high flotation	33/16LL500, 10 ply	

Maximum side slope rating, stowed position 50% (26°)

Maximum slope rating, stowed position 50% (26°)

Note: Slope rating is subject to ground conditions and adequate traction.

Floor loading information

Tire load maximum	4734 lbs	2147 kg
Outrigger load, maximum (If equipped)	4734 lbs	2147 kg
Tire contact pressure	116 psi	8.12 kg/cm ² 796 kPa
Occupied floor pressure	167 psf	816 kg/cm ² 8.00 kPa

Note: Floor loading information is approximate and does not incorporate different option configurations. It should be used only with adequate safety factors.

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice or obligation.

Specifications

GS-4390

Height, working maximum	49 ft	15.1 m
Height, platform maximum	43 ft	13.1 m
Height, stowed maximum, rails up	115.5 in	2.9 m
Height, stowed maximum, rails lowered	90.5 in	230 cm
Width, 315/55D20 tires	92 in	234 cm
Width, 12-33 tires	90 in	229 cm
Width, high flotation tires	101 in	2.6 m
Length, platform retracted Models with one extension deck	155.25 in	3.9 m
Length, platform extended Models with one extension deck	212.5 in	5.4 m
Length, platform retracted Models with two extension decks	156.5 in	3.9 m
Length, platform extended Models with two extension decks	258.5 in	6.6 m
Length, platform retracted Models with outriggers Models with two super decks	192 in	4.9 m
Length, platform extended Models with two super decks	290.5 in	7.4 m
Maximum load capacity	1500 lbs	680 kg
Maximum wind speed	28 mph	12.5 m/s
Wheelbase	115 in	2.9 m
Turning radius (outside)	210 in	5.3 m
Turning radius (inside)	85 in	2.2 m
Ground clearance	14 in	36 cm

Weight

(Machine weights vary with option configurations. See serial label for specific machine weight.)

Platform dimensions

Platform length x width	150 in x 72 in	3.8 x 1.8 m
Platform extension length	60 in	1.5 m

Drive speeds

Stowed, maximum	4 mph	6.4 km/h
Platform raised, maximum	0.7 mph 40 ft / 39 sec	1.1 km/h 12.2 m / 39 sec
Controls	Proportional	
AC outlet in platform	Standard	
Maximum hydraulic pressure (functions)	3500 psi	241.3 bar
Tire size	10-16.5 NHS	
Tire size, high flotation	33/16LL500, 10 ply	

Maximum side slope rating, stowed position 50% (26°)

Maximum slope rating, stowed position 50% (26°)

Note: Slope rating is subject to ground conditions and adequate traction.

Floor loading information

Tire load maximum	4722 lbs	2142 kg
Outrigger load, maximum (If equipped)	4722 lbs	2142 kg
Tire contact pressure	115 psi	8.09 kg/cm ² 794 kPa
Occupied floor pressure	167 psf	815 kg/cm ² 8.99 kPa

Note: Floor loading information is approximate and does not incorporate different option configurations. It should be used only with adequate safety factors.

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice or obligation.

Specifications

GS-5390

Height, working maximum	59 ft	18.2 m
Height, platform maximum	53 ft	16.2 m
Height, stowed maximum, rails up	10.33 ft	3.2 m
Height, stowed maximum, rails lowered	97.25 in	247 cm
Width, 315/55D20 tires	92 in	234 cm
Width, 12-33 tires	90 in	229 cm
Width, high flotation tires	101 in	2.6 m
Length, platform retracted	162 in	4.9 m
Models with one extension deck		
Length, platform extended	212.6 in	5.4 m
Models with one extension deck		
Length, platform retracted	192 in	4.9 m
Models with two extension decks		
Length, platform extended	258.5 in	6.6 m
Models with two extension decks		
Length, platform retracted	192 in	4.9 m
Models with outriggers		
Models with two super decks		
Length, platform extended	290.5 in	7.4 m
Models with two super decks		
Maximum load capacity	1500 lbs	680 kg
Maximum wind speed	28 mph	12.5 m/s
Wheelbase	115 in	2.9 m
Turning radius (outside)	210 in	5.3 m
Turning radius (inside)	85 in	2.2 m
Ground clearance	14 in	36 cm

Weight

(Machine weights vary with option configurations. See serial label for specific machine weight.)

Platform dimensions

Platform length x width	150 in x 72 in	3.8 x 1.8 m
Platform extension length	60 in	1.5 m

Drive speeds

Stowed, maximum	4 mph	6.4 km/h
Platform raised, maximum	0.7 mph 40 ft / 39 sec	1.1 km/h 12.2 m / 39 sec
Controls	Proportional	
AC outlet in platform	Standard	
Maximum hydraulic pressure (functions)	3500 psi	241.3 bar
Tire size	10-16.5 NHS	
Tire size, high flotation	33/16LL500, 10 ply	

Maximum side slope rating, stowed position 40% (22°)

Maximum slope rating, stowed position 40% (22°)

Note: Slope rating is subject to ground conditions and adequate traction.

Floor loading information

Tire load maximum	5294 lbs	2401 kg
Outrigger load, maximum (If equipped)	5294 lbs	2401 kg
Tire contact pressure	129 psi	9.08 kg/cm ² 890 kPa
Occupied floor pressure	187 psf	912 kg/m ² 8.94 kPa

Note: Floor loading information is approximate and does not incorporate different option configurations. It should be used only with adequate safety factors.

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice or obligation.

California Proposition 65



Operating, servicing and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. These chemicals can be emitted from or contained in other various parts and systems, fluids and some component wear by-products. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your equipment and vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your equipment or vehicle and after operation. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.